

Rev. 12/2014



**SGS**  
**FLUE FIRED KETTLES**

# **OPERATIONS/MAINTENANCE/PARTS MANUAL**

LP or Diesel Burner Systems



12325 River Road North Branch MN 55056 ~ Phone: 651-674-4491 ~ Fax: 651-674-4221  
[www.steppmfg.com](http://www.steppmfg.com)

## *Warranty*

Stepp Manufacturing Company Inc. hereby warrants to the original purchaser that products manufactured by Stepp Mfg. will be free from defects in material and workmanship for a period of one (1) year from the date of purchase.

Stepp Mfg., at its discretion, will provide for the repair or replacement of any part found upon examination by Stepp Mfg. to be defective, except as noted below. Such repair or replacement will be free of charge to the original purchaser for a period of one (1) year from the date of purchase, except as noted below.

### **No warranty is extended to cover:**

- Product pump wear or damage caused by foreign objects.
- Routine maintenance, cleaning, and adjustments.
- Parts/components that have been altered, misused, or improperly adjusted or maintained.
- Transportation to and from the place of warranty repair.
- Removal of material from equipment.

### **The following items are covered solely by their manufactures warranty:**

- Engines
- Hydraulic components
- Burners
- Pumps
- Tires
- Other component parts

### **The following items are covered by a pro-rata warranty:**

- Hoses that carry heated materials.
- Heating elements for hoses and wands.

### **Disclaimer of further warranty:**

Stepp Mfg. makes no warranty, expressed or implied, other than this warranty. The implied warranties of merchantability and fitness for particular purpose are hereby disclaimed. Repair or replacement of products or parts proving to be defective in material or workmanship shall be the exclusive remedy for breach of this warranty.

Stepp Mfg shall not be liable for incidental or consequential damages including but not limited to: damages for inconvenience, rental or purchase of replacement equipment, for loss of profits, loss of material, or other loss resulting from breach of this warranty.

Stepp Mfg reserves the right to incorporate any changes in design into its products without obligation to make such changes on products previously manufactured.

*Please see Warranty section for more details.*

*Stepp Manufacturing Co., Inc.*  
12325 River Road  
North Branch, MN 55056  
P: 651-674-4491 F: 651-674-4221  
[www.steppmfg.com](http://www.steppmfg.com)

# **INTRODUCTION**

## ***SGS Flue Fired Kettle***

Thank you for selecting *Stepp* highway maintenance equipment. We are confident you will be satisfied with the *Stepp SGS Flue Fired Kettle*. *Stepp Manufacturing* is backed by over 70 years of experience in the design and manufacture of highway maintenance equipment. This experience along with our innovative design and unique features make the *Stepp SGS* the fastest and most efficient *Flue Fired Kettle* available. Continued research and development, along with input from you, the user, help make this possible.

To assure safe operation of this equipment, the operator must read and understand all operating procedures and safety notices contained in this manual. In addition, the operator must receive instruction from their supervisor, or the manufacturer, on how to safely operate the *Stepp SGS*. Contact the manufacturer if any questions arise or if you desire training for additional staff members.

Operating instructions, adjustments, and periodic maintenance procedures are given so you, the operator, can keep your unit working like new and expect many years of dependable service from it. Remember, any machine, regardless of design or type, will perform only in relation to the way it is operated and the maintenance it receives.

Read this manual carefully and observe all Warnings and Cautions. If you have any recommendations or comments regarding this manual, please send them attention to: Engineering Dept., *Stepp Manufacturing Co. Inc.*, 12325 River Road, North Branch MN. 55056-6225 or call 651-674-4491. All comments we receive are reviewed and may be incorporated into future manuals.

When ordering parts or making any inquiry about the *Stepp SGS*, be sure to include the model number and serial number found on the data plate attached to the frame.

# **TABLE OF CONTENTS**

Introduction	3
Table of Contents	4
Warnings, Cautions, Notes	5
Operations	7
Maintenance	19
Troubleshooting	29
Replacement Parts	41
NHTSA Reporting Safety Defects	51
Warranty Guide	53
Schematics	59
Watlow Programing	65
Hydraulic Oil MSDS	75
Tire Information/ Engine Manual	Inserts

## **IMPORTANT NOTICE!**

This manual contains cautions and warnings that alert you to potential safety issues.

**WARNING** is used to inform you of conditions or operations that could cause serious injury or death.

**CAUTION** is used to inform you of conditions or operations that could cause damage to the equipment

**NOTE** is used to provide you with additional information that may be helpful or useful for a particular situation.

This manual explains the basic operations, maintenance, and use of the Stepp SGS Flue Fired Kettle. The main objective of this equipment is to heat various bitumens and emulsions for crack filling and seal coating.

# Before Starting or Operating this Machine

Understand and observe all the following **Warnings**, **Cautions**, and **Notes**.

## WARNINGS

- ◆ This equipment contains mechanical and heating components that may cause serious injury or death if not handled or maintained properly. All personnel must be properly trained in the operation and maintenance of this equipment.
- ◆ Before refueling, shut off the burners and allow all flames in the burner and pilot light to extinguish. Shut off the engine.
- ◆ Check fuel lines, fuel line connections, and all other components for leaks. If any leaks are found, they must be repaired before using the unit.
- ◆ Know the temperature required for the material being used, and do not exceed this temperature. Avoid over heating, as this may cause equipment damage, personal injury, and/or death.
- ◆ Never load a tank with heated oil when moisture is present in the tank. Depending on the temperature of the hot oil, the moisture may instantly boil causing hot oil to foam up and out of the tank causing severe burns.
- ◆ Do not operate the tack tank burner when the amount of material in the tank is less than 4" above the flues. Allow 10 minutes cool-down time after the burner has been shut off before exposing the flues. Exposed flues will over-heat and cause an explosion and/or fire.
- ◆ The tack tank cover must be unlatched when operating the tack tank burner. This is to provide for emergency venting, in the event of a flash, to prevent the tank from exploding.

## CAUTIONS

- ◆ Know the materials being used and know the proper handling, heating, application, clean-up, and storage procedures. Not all materials are compatible with each other. Many materials have a very limited shelf life. Most materials require special handling procedures to prevent personal injury and/or equipment damage. Contact your material supplier and/or manufacturer for proper handling instructions. Equipment malfunction or damage due to improper handling or use of the materials is not covered by warranty.
- ◆ Do not exceed the maximum heating temperature or storage time as recommended by the material manufacturer. This may cause emulsion type materials to separate and become difficult or impossible to remove from the machine. Consult with the material manufacturer for recommendations.
- ◆ Over-agitation or circulation may cause emulsion type materials to separate and become difficult or impossible to remove from the machine. Consult with the material manufacturer for recommendations.
- ◆ Do not mix *Anionic* and *Cationic* materials together, as the materials attach to each other and will become difficult or impossible to remove from the machine. If you are not sure consult your material supplier.

## NOTES

- ◆ Become familiar with the Material Safety Data Sheet (MSDS) for the material being used in the machine and take appropriate safety precautions. Wear the proper clothing and protective gear as recommended by the MSDS and your safety director.
- ◆ DO NOT use the equipment unless it is in good condition.
- ◆ In case of skin contact with hot materials, dip into **cool, clean water immediately**. Do not wipe the product, as this will spread the burn.
- ◆ Consult the MSDS and contact your safety director for proper extinguishing of petroleum based fires.
- ◆ Carry a fire extinguisher(s) as recommended by your safety director.
- ◆ Notify your supervisor or the manufacturer if any questions arise concerning the operation of this equipment.



# OPERATIONS

---


## OPERATIONS

## Transporting

**WARNING:** Prior to transporting, the driver of the tow vehicle must assure the safety of the operation. The driver must also know, and assure, the product temperature is within limits.

### Trailer Hook-up

1. Connect trailer to towing vehicle.
  - a. Check that hitch is engaged properly.
  - b. Attach safety chains to towing vehicle.
  - c. Connect battery charging circuit to tow vehicle if required.
  - d. Connect electrical plug to towing vehicle.
  - e. Connect breakaway cable to towing vehicle.
  - f. Check operation of lights and brakes.
2. Secure trailer for transport.
  - a. Shut OFF the engine and burners.
  - b. Shut OFF all fuel valves.
  - c. Be sure the product temperature is not above the recommended operating temperature.
  - d. Securely latch the tank cover.

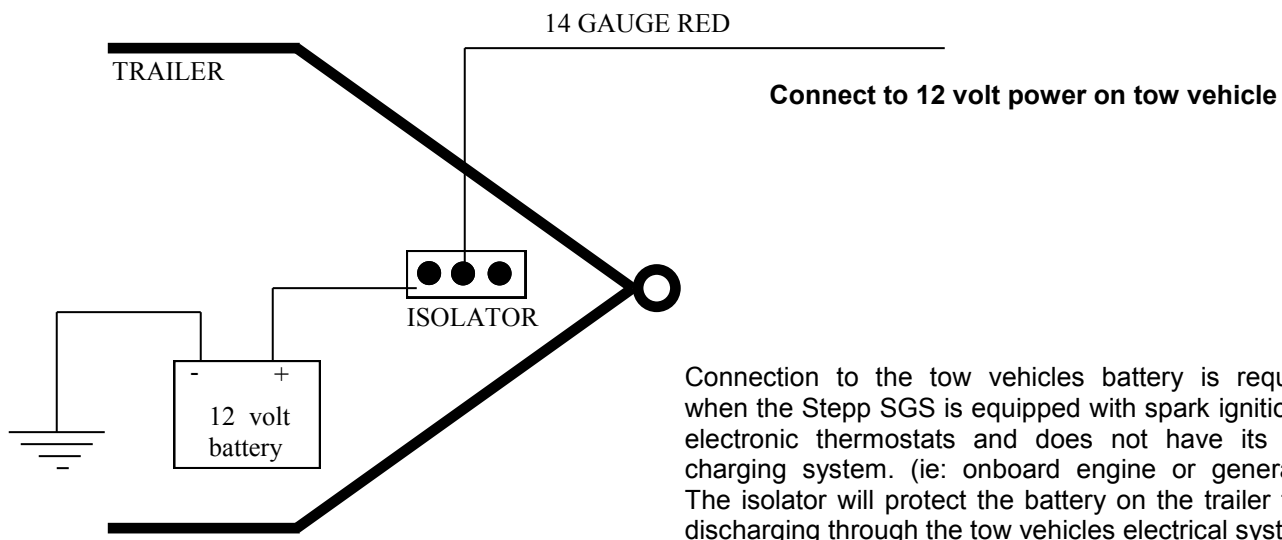

Connection to the tow vehicles battery is required when the Stepp SGS is equipped with spark ignition or electronic thermostats and does not have its own charging system. (ie: onboard engine or generator) The isolator will protect the battery on the trailer from discharging through the tow vehicles electrical system.



## **OPERATIONS**

## **Loading**

**WARNING:** *Be sure operators have been properly instructed in starting and operating equipment.*

1. Check that the proper material is being used.
2. The tank must be thoroughly cleaned if the material being loaded is not compatible with that already in the tank. Check with your material supplier for compatibility.
3. Load tank through top manhole cover.



## **OPERATIONS**

## **LP Burner w/ Thermostat**

This system uses electrical sparks to ignite the pilot lights that, in turn, ignite the burners. If the pilot light goes out, the system will attempt a re-ignition. If the re-ignition is not successful, the gas supply will automatically be shut off and the system must be vented before resetting the system. The system is reset by switching the 12 volt power supply OFF then ON again. By use of a thermostat, the system automatically controls the burners to maintain the desired product temperature.

**WARNING:** *BEFORE IGNITING BURNER: Know the materials being used. DO NOT exceed flash point or operating range temperatures.*

### **Igniting Burner**

1. Turn OFF burner and pilot valves.
2. Attach liquid LP bottle to system and set regulator between 10 and 20 PSI, depending on intensity of flame desired.
3. Open pilot light valve.
4. Turn on main power switch and a clicking sound can be heard as the ignition system starts to work.
5. When the pilot light ignites, proceed to next step. If ignition has failed, reset power switch. **NOTE:** *The ignition system is designed to sense flame at the pilot light to act as flameout protection. If flame is not present within approximately six seconds, the ignition igniter will drop out and require resetting with the power switch.*

**WARNING:** *The burner chamber will require venting to eliminate the possibility of gas build up after each ignition reset.*

6. Open burner valve then set thermostat to the desired temperature and the burner will ignite.
7. Operate engine or other charging circuit as necessary to provide power to the thermostat and spark ignition system.

### **To Shut Off Burners**

1. Turn off power switch on the control box.

**CAUTION:** *When storing the equipment, turn off fuel supply tank valve and allow the fuel system to burn off. This will prevent temperature changes from building excess pressure in the system and possibly damaging components. Then turn OFF the power switch.*

## **OPERATIONS**

## **LP Burner w/ Baso Valve**

When equipped with a Baso Safety Valve, this system will shut off the gas supply to the burners if the flame should go out for any reason. This system is not equipped with automatic temperature controls. It is the operators responsibility to shut off the burners when the product reaches the recommended temperature. Allow for temperature “creep” when the burners are shut off.

### **Igniting Burner**

1. Verify that the main burner valve and lighting wand valve are OFF.
2. Attach Liquid LP bottle to system and set regulator between 10 to 20 PSI, depending on intensity of flame desired.
3. Open pilot light control valve between four to six turns.
4. Open lighting wand valve  $\frac{1}{4}$  to  $\frac{1}{2}$  turn and light immediately to prevent gas build-up and fire hazard.
5. Insert lighting wand near outlet of pilot light.
6. Push the button on the safety control valve (baso valve).
7. Once the pilot light has ignited, hold the button down 30-45 seconds, or until it stays energized by itself.
8. Once the pilot light is lit and the Baso Valve is staying in the operating position, close valve on lighting wand and store.
9. Open the main burner valve slowly until you acquire the desired flame.

### **To Shut Off Burners**

1. Turn off the burner control valve and allow the burner to self-extinguish.
2. Close pilot light valve.

**CAUTION:** *When storing the equipment, turn off fuel supply tank valve and allow the fuel system to burn off through the lighting wand. This will prevent temperature changes from building up excess pressure in the system and possibly causing damage to the equipment, or personal injury and/or death.*

## **OPERATIONS**

## **Diesel Burner**

This system incorporates a 12 volt burner and blower assembly and burns #2 diesel fuel. A 12 volt battery and charging circuit supply power to the burner, blower motor, and thermostat. The charging circuit may consist of an engine driven alternator mounted on the unit, or a hook-up to the tow vehicles charging system. The thermostat will automatically control the burners to maintain the desired temperature. The temperature of the material is shown on LCD digital displays.

### **Igniting Burner**

1. Check fuel tank for proper fuel type and quantity.
2. Set thermostat to the product manufacturers recommended level.
3. Turn ON burner power switch and the burner will ignite.
4. Operate battery charging device.

### **To Shut Off Burner**

1. Set thermostat to the lowest setting.
2. Turn OFF burner power switch.

**CAUTION:** *The burner requires a minimum of 12 volts for proper operation. Poor combustion with excessive smoke and lack of heat or burner malfunction will result with lower voltage. Assure the battery is fully charged and the charging circuit is operating properly for maximum performance.*



## **OPERATIONS**

## **Pumping System w/ Spray Wand**

An optional pump may be installed to pump material through a spray wand. The pump may be driven by a gas or diesel engine or by an electrical or hydraulic system. The plumbing must be purged of material when finished to prevent plumbing freeze-up. This is done by reversing the pump to suck the material out of the wand. An optional flush tank may also be installed to further flush the system of any remaining material. **NOTE:** *All valves should be OFF unless directed to be open.*

- 1. Circulate.** In this operation, the contents of the tank are pumped through the recirculation system and directed back to the tank to aid heating and mixing.
  - a. Set Recirculate/Spray valve (2) to "Recirculate" position.
  - b. Open tank valve (1).
  - c. Engage pump in "Forward" direction.
- 2. Spray.** In this operation, the contents of the tank are pumped to the wand for application to the road surface.
  - a. Set Recirculate/Spray valve (2) to "Spray" position.
  - b. Open tank valve (1).
  - b. Engage pump in "Forward" direction.
  - c. Open valve on spray wand.
- 3. System Purge.** (suck back) In this operation, the pump is "Reversed" to purge the product from the system.
  - a. Disengage pump.
  - b. Set Recirculate/Spray valve (2) to "Spray" position.
  - c. Open tank valve (1).
  - d. Open valve on wand, then engage pump in "Reverse" for two minutes.
  - e. Close tank valve (1) and disengage pump.

4. **System Flush. (optional)** Flushing solvent is pumped through the pump and wand to clean material from the system.

**WARNING:** *The burners must be extinguished prior to performing flushing operations. DO NOT allow flushing solvent to contaminate the contents of the main tank.*

- a. Disengage pump.
- b. Set Recirculate/Spray valve (2) to "Spray" position.
- c. Open flush valve (3).
- d. Place end of wand into suitable container. **NOTE:** *DO NOT allow flushing solvent to splash out of container or enter product tank.*
- e. Engage pump in "Forward" position, then open the wand valve to flush.
- f. When complete, disengage pump.
- g. Close flush valve (3) and open air valve (4).
- h. Engage pump in "Forward" position to vacate as much solvent as possible.
- i. Disengage pump and close air valve (4).
- j. Place suitable container under tank valve drain and open valve (5) to allow all tank valve contents to drain.
- k. Dispose of flushing solvent in accordance with local, state, and federal laws.

An optional pump may be installed to pump material through a wand and spray bar. The pump may be driven by a gas or diesel engine, or by an electrical or hydraulic system. The plumbing must be purged of material when finished to prevent plumbing freeze-up. This is done by reversing the pump to suck the material out of the system. An optional flush tank may also be installed to further flush the system of any remaining material.

1. **Circulate.** In this operation, the contents of the tank are pumped through the Recirculate/Spray valve and directed back to the tank to aid heating and mixing.
  - a. Set the Recirculate/Spray valve to "Recirculate" position.
  - b. Set the Product/Flush valve to "Product" position.
  - c. Engage pump in "Forward" direction.
2. **Wand.** In this operation, the contents of the tank are pumped to the wand for application to the road surface.
  - a. Set the Recirculate/Spray valve to "Spray" position.
  - b. Set the Product/Flush valve to "Product" position.
  - c. Set the Wand/Spray Bar valve to "Wand" position.
  - d. Engage pump in "Forward" direction.
  - e. Open valve on spray wand handle.
3. **Spray Bar.** In this operation, the contents of the tank are pumped to the spray bar for application to the road surface.
  - a. Set the Recirculate/Spray valve to "Spray" position.
  - b. Set the Product/Flush valve to "Product" position.
  - c. Set the Wand/Spray Bar valve to "Spray Bar" position.
  - d. Engage pump in "Forward" direction.
4. **System Purge.** (suck back) In this operation, the pump is "Reversed" to purge the product from the system.
  - a. Set the Recirculate/Spray valve to "Spray" position.
  - b. Set the Product/Flush valve to "Product" position.
  - c. Set the Wand/Spray Bar valve as needed to suck back the system as desired. (open valve on wand handle if sucking back the wand)
  - d. Engage pump in "Reverse" for two minutes.
  - e. Close valve on wand handle and disengage pump.

5. **System Flush. (optional)** Flushing solvent is pumped through the pump, spray bar, and wand to clean material from the system.

**WARNING:** *The burners must be extinguished prior to performing flushing operations. DO NOT allow flushing solvent to contaminate the contents of the main tank.*

- a. Disengage pump.
- b. Set the Recirculate/Spray valve to "Spray" position.
- c. Set the Product/Flush valve to "Flush" position.
- d. Set the Wand/Spray Bar valve as needed to flush the system as desired.
- e. Place a suitable container under spray bar.
- f. Engage pump in "Forward" position to flush system.
- g. Open valve on wand handle to flush wand.
- h. When complete, disengage pump.
- i. Dispose of flushing solvent in accordance with local, state, and federal laws.



# Pumping operations

## **Heated Hose & Wand (optional)**

**CAUTION:** *DO NOT turn on the wand heat unless the hose is filled with material. Damage to equipment may result.*

The application wand and hose may be equipped with an optional electrical heating element. This heating element prevents the product from freezing in the hose and wand. The electric wand thermostat should be set to the desired temperature 30-40 minutes before trying to pump product through the hose and wand. This will allow time for the product to re-liquefy in the hose.

**NOTE:** *No flushing or clean-up is required with this system. Just shut the machine off as the product in the hose can be remelted by activating the wand heat.*

## **Engine Operations (optional)**

1. Engine Starting
  - a. Check all fluid levels.
  - b. Check reduction drive oil level.
  - c. Open fuel valve at fuel tank.
  - d. Start engine. (see manual insert)
  - e. Set the engine speed to the desired level.
2. Turning OFF Engine
  - a. To stop engine, move throttle to the idle position.
  - b. Allow a two minute cool down period at idle.
  - c. Shut OFF engine.
  - d. Refer to the engine manufacturers operators manual for additional information.

## **Murphy Shut Down Switch (optional)**

If the engine is equipped with a Murphy switch it must be held in while starting the engine. Once the engine is started the release the switch. If the oil pressure or engine temperature limits are exceeded, the Murphy switch will shut down the engine, protecting it from damage.

# MAINTENANCE

---

# SGS MAINTENANCE SCHEDULE

ITEM	OPERATION TO PERFORM	DAILY	EVERY WEEK	EVERY MONTH	EVERY 3MO	EVERY 6MO	EVERY YEAR
Burner Diffuser	Inspect burner diffuser for damage and deterioration.				X		
Burner Diffuser	Replace burner diffuser. Refer to parts list for P/N.						X
Product Pump	Adjust end clearances and packing as needed.					X	
Door Hinges And Slides	Lubricate with high temperature grease. Inspect for worn or damaged components.				X		
Hose Assembly On Spray Wand	Inspect for cracks, fraying, or deterioration. Replace if needed with original equipment hose.		X				
Hose Assembly On Spray Wand	Replace with original equipment hose.						X
Main Tank	Clean out and inspect for cracks or other damage. Weld or repair as needed						X
Heating Flues	Clean and inspect for leaks, cracks, or other damage.					X	
Fuel Filter for Burner	Install new filter for diesel burner.					X	
Thermostats	Check for proper calibration, adjust as needed.	X					
Fuel Lines	Check for security, damage, and leaks. Replace with oem type hose as needed	X					
Fuel Tanks	Check for damage and leaks.	X					
Brakes	Test for proper operation.	X					
Brake adjustment/inspection	Adjust brake shoes to proper clearance. Check brake shoes for excessive wear.				X		
Wheel Bearings	Inspect for corrosion and wear. Clean and repack, install with new seals.						X
Suspension Part	Inspect for bending, loose fasteners, and wear. Repair as needed.				X		
Axle Hangers	Inspect weld for security.					X	
Wheel Nuts	Re-torque to proper specs.				X		
Tires	Check pressure, Inspect for wear, cuts, or other damage.		X				
Hitch	Check for damage and loose fasteners.	X					
Lights	Check For proper operations.	X					

# SGS MAINTENANCE RECORD

DATE	MAINTENANCE PERFORMED	HOUR METER	SERVICED BY

***All maintenance items must be performed according to the maintenance schedules and documented for warranty coverage to be effective.***

## **Oil & Filter Change**

1. Run engine until operating temperature is reached, then shut OFF engine.
2. Place drain pan under oil drain hose.
3. Open oil drain valve and drain oil from the engine.
4. Close the oil drain valve.
5. Place drain pan under engine oil filter and remove filter.
6. Coat gasket of new oil filter with engine oil and install, hand tighten only.
7. Add 5 quarts SAE 10W40 oil.
8. Run engine and check for leaks.
9. Return used oil to a recycling center.

## **Air Cleaner Service**

1. Remove wing nut in center of air cleaner.
2. Remove filter.
3. Clean element following instructions on air cleaner housing. Element may be cleaned up to six times before replacement.
4. Reinstall element in housing and tighten wing nut.

## **Fuel Filter Change**

1. Position drain pan under fuel filter.
2. Remove fuel filter.
3. Fill new filter with clean diesel fuel.
4. Lubricate gasket with fuel and install filter, hand tighten only.
5. Loosen the air vent plug on the injection pump where the fuel line is attached.
6. Pump the lever on the fuel pump until no air bubbles are present, tighten air vent plug.

## **Cooling System Service**

1. Allow engine to cool to ambient temperature.
2. Open radiator petcock and drain coolant into a suitable container.
3. Open petcock on left side of engine block and drain into a suitable container.
4. Open radiator cap and remove lower radiator hose.
5. Flush clean water through radiator until the water comes out clear.
6. Remove the thermostat then flush clean water through the engine block until the water comes out clear.
7. Install new thermostat and gasket.
8. Install radiator hose and close all petcocks.
9. Refill system with fresh anti-freeze in a 50/50 mix.
10. Run engine and check for leaks, then re-check coolant level after engine has cooled.

### **Filter Change**

1. Position drain pan under filter.
2. Remove oil filter.
3. Lubricate gasket of new filter with hydraulic oil.
4. Install new filter, hand tighten only.
5. Start unit and check for leaks.
6. Shut down unit, then check hydraulic oil level.

### **Hydraulic Oil Change**

1. Position drain pan under the hydraulic reservoir. (Reservoir capacity exceeds 15 gallons, be sure drain pans have adequate capacity)
2. Remove drain plug from bottom of reservoir and drain oil.
3. Return used oil to a recycling center.
4. Replace drain plug using pipe sealer on threads.
5. Fill reservoir with hydraulic oil to about 3 to 4 inches from the top of the tank. (approx. 15 gal.)

### **Strainer Screen Service**

1. Position drain pan under the hydraulic reservoir. (Reservoir capacity exceeds 15 gallons, be sure drain pans have adequate capacity.)
2. Remove drain plug from bottom of reservoir to drain oil.
3. Replace drain plug using pipe sealer on threads.
4. Remove hose clamps and 1¼" suction hose from nipple on hydraulic reservoir tank.
5. Unscrew king nipple from street-el.
6. Unscrew strainer from tank and clean in solvent.
7. Apply pipe sealer to threads and reinstall strainer and king nipple.
8. Attach 1¼" suction hose to king nipple and tighten clamps.
9. Refill hydraulic reservoir with hydraulic oil.
10. Check for leaks.

## **MAINTENANCE**


## **Burner**

### **Fuel Filter Replacement (burner)**

1. Close fuel shutoff valve located at the fuel tank.
2. Remove the nut securing the canister to the fuel filter body.
3. Remove the canister and the filter element.
4. Replace the element with a new one.
5. Reinstall the canister and turn on the fuel valve.
6. Attach a clear hose to the fuel pump bleeder screw on the burner and direct the hose into a suitable container.
7. Start engine, set thermostats, then turn on the burner power switch. This will allow the fuel pump in the burner to run so the fuel system can be bled of air.
8. Loosen the bleeder screw and observe the flow of fuel through the clear hose, when all air is purged from the system close the bleeder screw.
9. Check entire fuel system for leaks.
10. Set the thermostats to the desired level and the burner will ignite.

### **Brush Inspection (Every 300 hours)**

1. Using a screwdriver, remove 2 brush holders located on the exterior of the motor housing and remove the brushes.
2. Replace brushes if less than 1/4 inch in length.

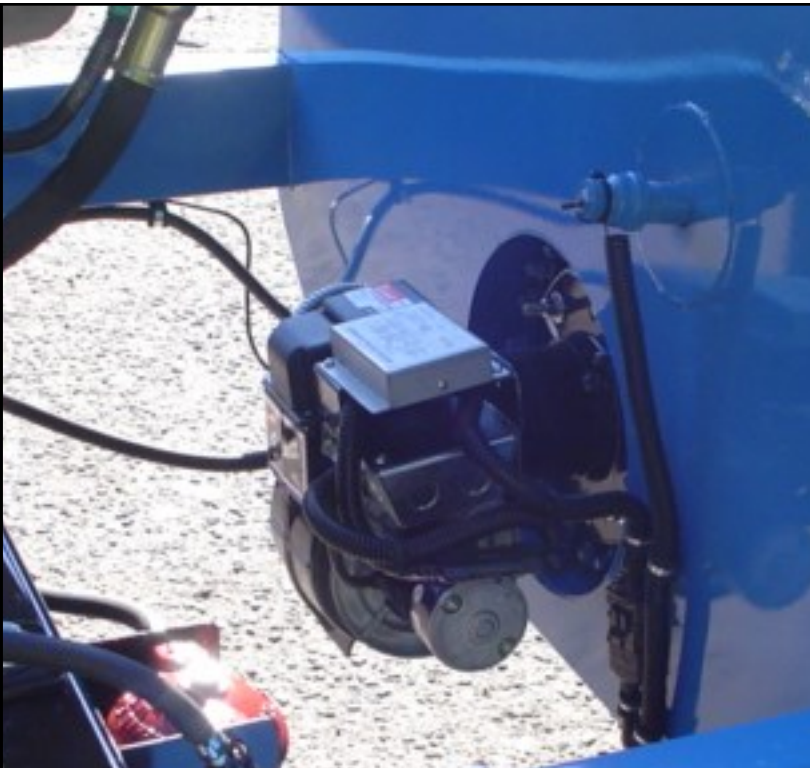



## **MAINTENANCE**

## **Hot Asphalt Hose Replacement**

**CAUTION:** *Do not remove hose without first removing the heating element or damage to heating element will result.*

### **Hose Removal:**

1. Remove heating element from hose (refer to heating element removal procedures).
2. Disconnect all electrical connections from hose.
3. Separate the hose from the wand at the quick coupling.
4. Remove the quick coupling from the hose and save for reuse on the new hose.
5. Unscrew the hose from the cross fitting at the end of the boom assembly.
6. Gently pull the hose off the unit, being careful not to damage the heating element.

### **Hose Installation:**

1. Screw the hose fitting into the cross fitting at the end of the boom assembly and tighten securely.
2. Screw the quick coupling to the other end of the hose and tighten securely.
3. Reconnect all electrical connections to hose.
4. Reinstall heating element into hose, but do not reconnect electrical connector at this time.  
**NOTE:** *The heating element will protrude about 10" from the end of the hose.*
5. Gently heat the end of the wand with a propane torch. This will soften the material in the wand for easy insertion of the protruding hose heating element (see next step).
6. Connect the hose to the wand at the quick coupling. Use gentle pressure to insert the protruding hose heating element into the wand.

**CAUTION:** *Do not apply power to the hose heating element in an empty hose or damage to the hose will result.*

7. Bring material in tank up to operating temperature (refer to operating instructions).
8. Verify hose heating element is disconnected.
9. Activate wand and boom heat for 20 minutes.
10. Pump material through wand until flowing freely (refer to operating instructions).
11. Stop pump. Connect hose heating element connector. The hose is now full of material and the unit can be returned to service.

**Hose Heating Element Removal:**

These instructions assume the heating element is functioning properly. If the heating element does not function, refer to the instructions on the following pages.

**NOTE:** *If the hose is damaged, skip steps 1 through 3, activate wand heat for 15 minutes, then begin at step 4.*

1. Start the engine and the burner and allow the product to reach operating temperature. Activate wand heat switch. Begin circulation of material through the wand into the recirculating flange when temperatures permit. When product is circulating freely proceed to step two.
2. Turn OFF the electric wand heat. Then with wand valve open, and the wand pressure control valve in the "Wand" position, reverse the pump for two minutes to clear the hose, wand, and boom of material.
3. Shut OFF the burner and the engine.
4. Disconnect the hose heating element connector at the end of the boom.

**NOTE:** *The following steps must be accomplished with all components warm.*

5. Remove the compression fitting that holds the hose heating element at the top of the cross fitting on the end of the boom.
6. Gently pull the heating element from the cross fitting and the hose.

**WARNING:** *The heating element will be HOT, wear protective clothing, leather welding gloves, and safety gear.*

**CAUTION:** *Do not pull on the wires to remove the heating element or damage to the element may result.*

### **Hose Heating Element Installation:**

1. Remove wand from hose at quick coupling.
2. Lay the hose out as straight as possible.
3. Install new compression fitting into cross fitting.

**NOTE:** *If hose DOES NOT contain material proceed with step 4. If hose CONTAINS material, replace step 4 with steps A & B listed below.*

4. Insert heating element into compression fitting and hose. About 10" of the heating element will protrude out the other end of the hose. Tighten compression fitting.
5. Insert protruding element into wand and reattach wand to hose at quick coupling. (Gently heat wand with propane torch to ease installation if needed.)
6. Reconnect all electrical connections.

**CAUTION:** *Do not apply power the hose heating element in an empty hose or damage to the hose will result.*

7. Bring material in tank up to operating temperature. (refer to operating instructions) and activate wand heat.
8. Pump material through wand until flowing freely. (refer to operating instructions) The hose is now full of material and the unit can be returned to service.

### **Steps A & B**

- A. Connect one lead of the heating element to the large terminal of the 24V alternator, and the other lead to a good chassis ground. Use 10 gage (minimum) jumper wires.
- B. Start the engine, as the heating element heats, insert it into the hose. Start and stop the engine, or disconnect the jumper wires, as needed to regulate the heat of the element. Use only enough heat to soften the material and allow the element to be pushed into the hose. (About 10" of the heating element will protrude out the other end of the hose) Tighten compression fitting.

Proceed to step 5 above.

**WARNING:** *The heating element will be HOT; wear protective clothing, leather welding gloves, and safety gear.*

# **Hose Heating Element Replacement**

**(Non-Functioning Element)**

### **Hose Heating Element Removal and Installation:**

These instructions assume the heating element is damaged and NOT functioning. If the heating element functions properly, refer to the instructions on the previous page. The element may be damaged during removal, rendering it useless.

A functioning hose heating element is slid into the hose alongside the non-functioning element. As the material in the hose is heated with the new element, the old element can be pulled from the hose.

1. Remove wand from hose at quick coupling. About 10" of the hose heating element protrudes out of the hose and into the wand. Gently heat wand with propane torch to ease separation if needed.
2. Disconnect the hose heating element connector at the end of the boom.
3. Remove the compression fitting nut that holds the hose heating element at the top of the cross fitting on the end of the boom. Then, remove the complete compression fitting.
4. Pull the element out and to the side far enough to allow a new element to be slid in alongside the old element.
5. Connect one lead of the new element to the large terminal of the 24V alternator, and the other lead to a good chassis ground. Use 10 gage (minimum) jumper wires.
6. Start the engine, as the heating element heats, insert it into the hose along side the old element. Start and stop the engine, or disconnect the jumper wires, as needed to regulate the heat of the element. Use only enough heat to soften the material and allow the element to be pushed into the hose.
7. Pull the old heating element from the cross fitting and the hose.
8. Secure new heating element in compression fitting, then reconnect electrical connector.
9. Insert protruding hose element into wand and reattach wand to hose at quick coupling. (Gently heat wand with propane torch to ease installation if needed.)

**WARNING:** *The heating element will be HOT, wear protective clothing, leather welding gloves, and safety gear.*

# **TROUBLE SHOOTING**



---

	<i>POSSIBLE CAUSE</i>	<i>Items to Check /Service</i>
<b>LACK OF PERFORMANCE</b>	Plugged Strainer Screen	Service strainer screen.
	Hydraulic Filter Plugged	Replace hydraulic oil filter.
	Collapsed Suction Hose	Replace suction hose and service strainer screen.
	Air Leak in Suction Hose	Replace hose.
	Low Fluid Level	Fill reservoir to proper level.
	Over Heated Hydraulic Fluid	Clean oil cooler fins with pressurized water.
	Worn Pump or Hydraulic Motor	Adjust, rebuild, or replace as necessary.
	Crushed Hydraulic Lines	Replace line.
	“Brand” valve relief out of adjustment	Adjust relief on “Brand” valves to 1000 lbs.
<b>HYDRAULIC MOTORS DO NOT TURN OR TURN SLOWLY</b>	Product in Tank not Melted	Allow for more time for product to melt.
	Foreign Material Jamming Agitator	Remove foreign material from agitator.
	Foreign Material Jamming Product Pump	Remove foreign material from product pump.
	Also see “Lack of Performance”	
<b>UNUSUAL NOISES</b>	Low Hydraulic Fluid	Fill reservoir to proper level.
	Air Leak in Suction Hose	Replace hose.
	Damaged Pump or Hydraulic Motors	Repair or replace as necessary.
<b>EXCESSIVE OIL LEAKS FROM PUMP OR HYDRAULIC MOTOR SHAFT</b>	Bad Shaft or Shaft Seal	Replace as necessary.

	<i><b>POSSIBLE CAUSE</b></i>	<i><b>Items to Check /Service</b></i>
<b>PRODUCT PUMP DOES NOT TURN</b>	Product in Tank not Melted	Allow more time for product to melt.
	Foreign Material Jamming Product Pump	Remove foreign material from product pump.
	Pump Motor not Functioning	Refer to “Hydraulic System” trouble shooting
<b>LACK OF FLOW FROM WAND</b>	Product Temperature too Cold.	Heat product to manufacturers recommended temperature.
	Product “Froze” in Wand & Hose	Allow additional time for heating element to melt product in hose.
	Non-functioning Heat Element in Hose	Refer to “Electric Wand & Hose” trouble shooting.
	WPC Valve not Positioned Correctly	Refer to operating instructions for WPC Valve position.
	WPC Valve and External Plumbing “Froze”	Heat to remelt product.
	Worn Product Pump	Adjust or repair product pump as necessary.

# TROUBLE SHOOTING

## Product Pump

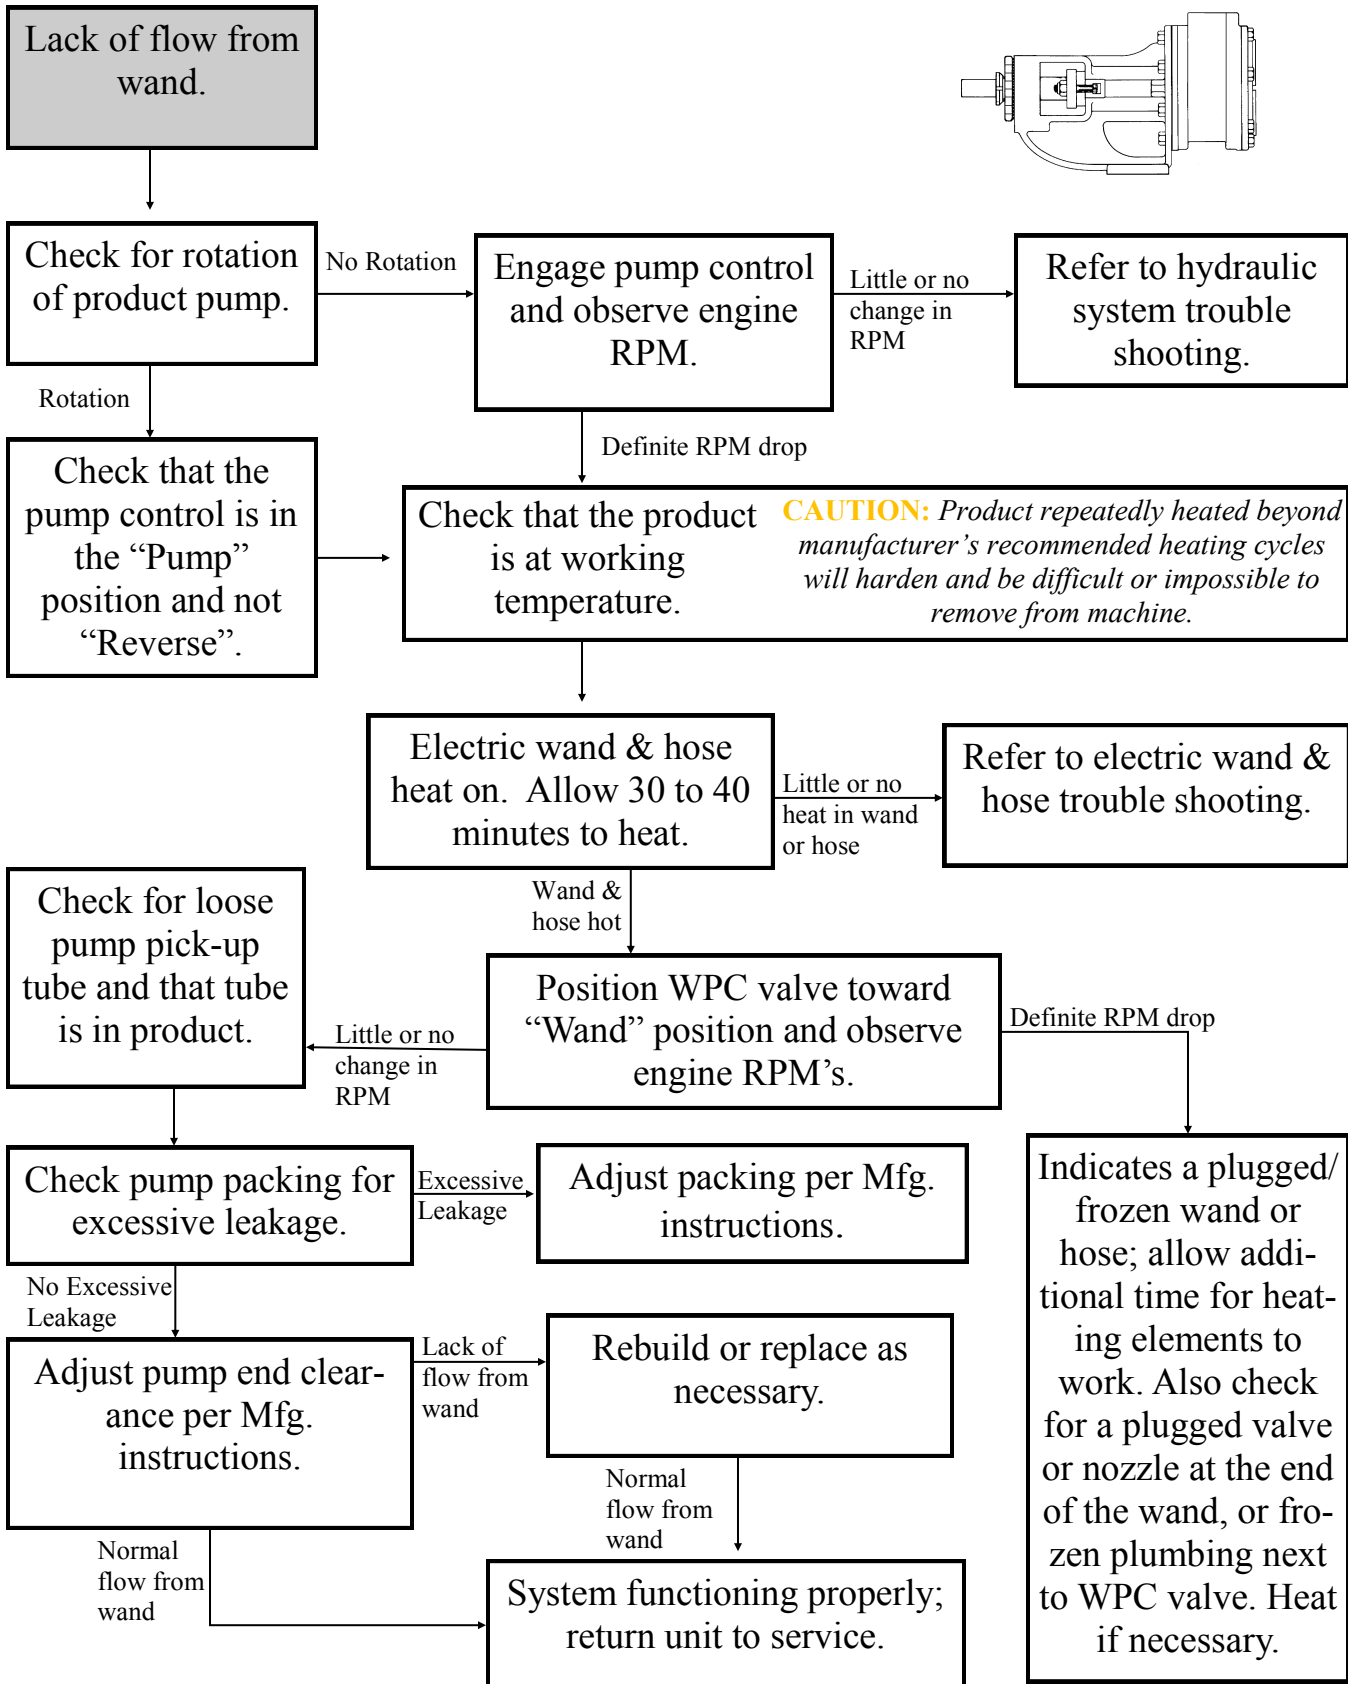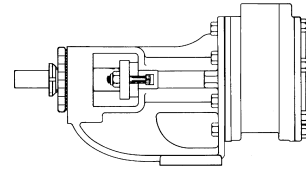



# TROUBLE SHOOTING

# Electric Wand & Hose

No heat, or low heat in wand or hose.

With engine OFF, Check for loose pulleys and loose or missing belts on 24 volt alternator.

Start engine, with wand switch OFF check voltage at battery terminal of 24 volt alternator.

24 to 28 volts

With engine running, turn wand switch ON, check voltage at battery terminal of 24 volt alternator.

24 to 28 volts

Check heating elements for an "open" condition. Check for faulty switch. Check for broken wires or loose connections from alternator to switch, and switch to heating elements.

9 volts or less

Check for a dead battery, then check for an open resistor or open wires from battery to alternator, or a shorted wire between the alternator and control panel switch and alternator and battery.

12 to 14 volts

Repair or replace alternator.


9 volts or less


Check for "short" between switch and heating elements. Alternately disconnect the wires to the hose and wand heating elements, when the voltage goes to 24 - 28 volts you have located the "shorted" circuit.

Check element resistance as follows:

- 15' hose element: .4 to 1.0 W.
- 20' hose element: .5 to 1.2 W.
- Wand element: .9 to 1.6 W.


Repair or replace as necessary.

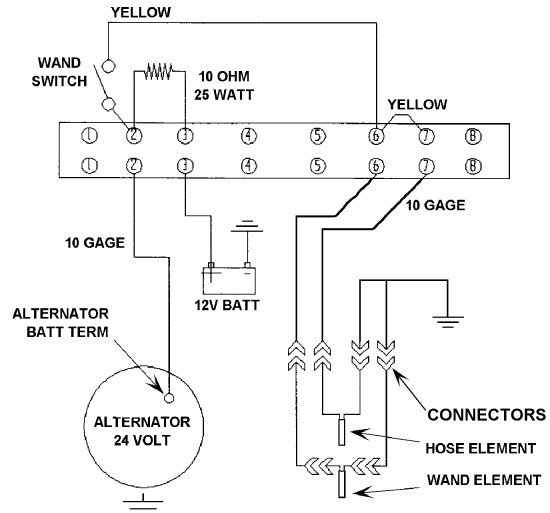

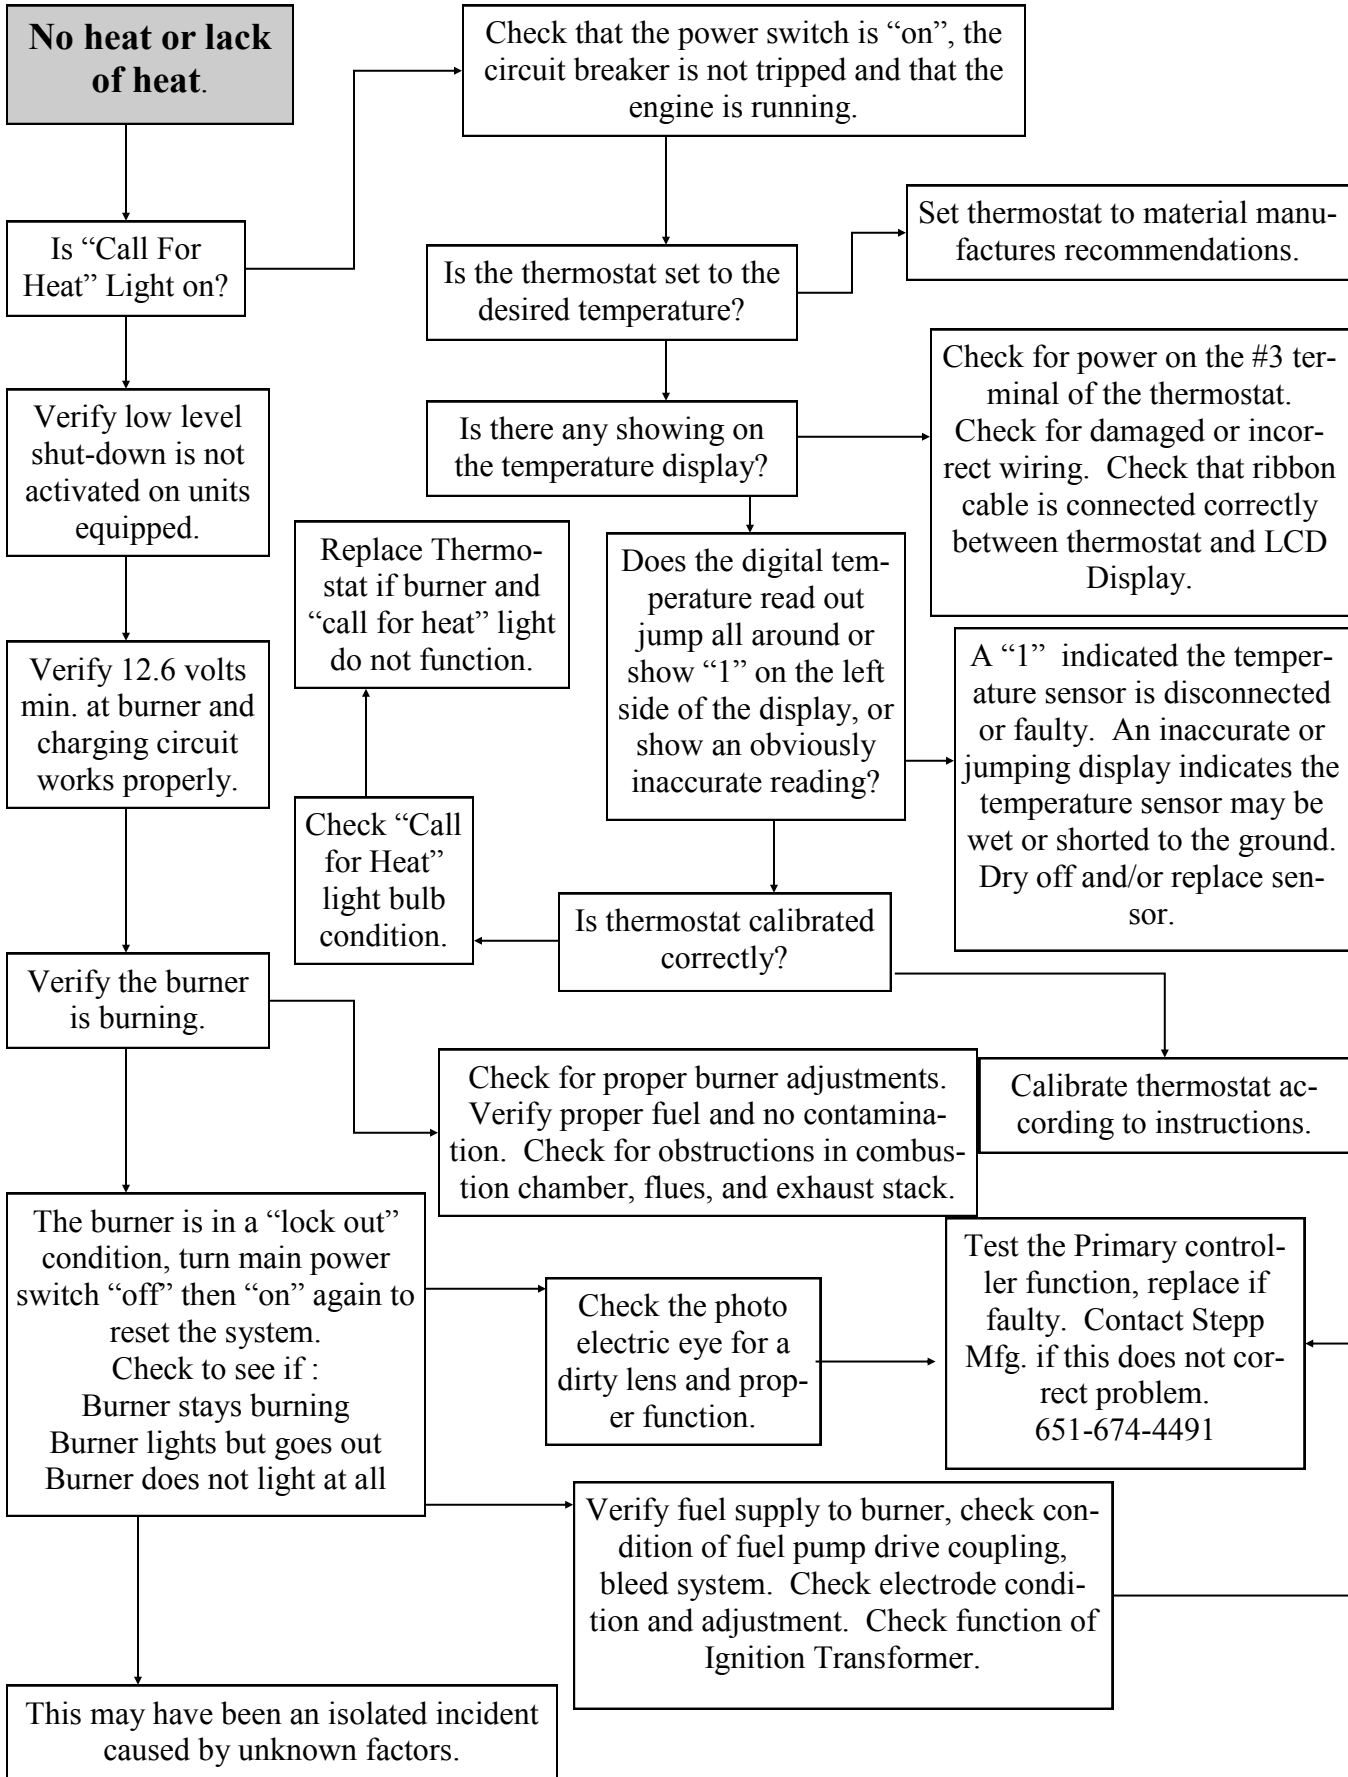


## Primary Controller Burner MTD/Hard Wired

**NOTE:** The primary controller can be bench tested for proper operation using an automotive type, 12 volt battery as a power source. Refer to the wiring schematics for wire identification.

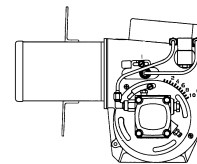

1. Remove controller from burner. Mark all wires for proper reassembly.
2. Using two test lights, or volt meters, connect one to the blue wire, and one to the white/orange wire of the controller. Connect the black leads of your test instruments to the negative (-) terminal of the battery.
3. Connect the black wire from the controller to the negative (-) terminal of the battery.
4. Connect the red, white/red, and the white wires together, then connect these three wires to battery (+) terminal. Both test instruments should show voltage for approximately 15 seconds. After 15 seconds, the controller should "lock out" and no voltage will be present.
5. Repeat step #4, only this time connect the two yellow wires from the controller together three seconds after applying power to the three wires of the controller. (This simulates the controller receiving a "flame" signal from the photo electric eye). The white/orange wire should show voltage as long as the controller is hooked to the battery. The blue wire should only show voltage for about 15 seconds. Replace the controller if it fails any of these tests.

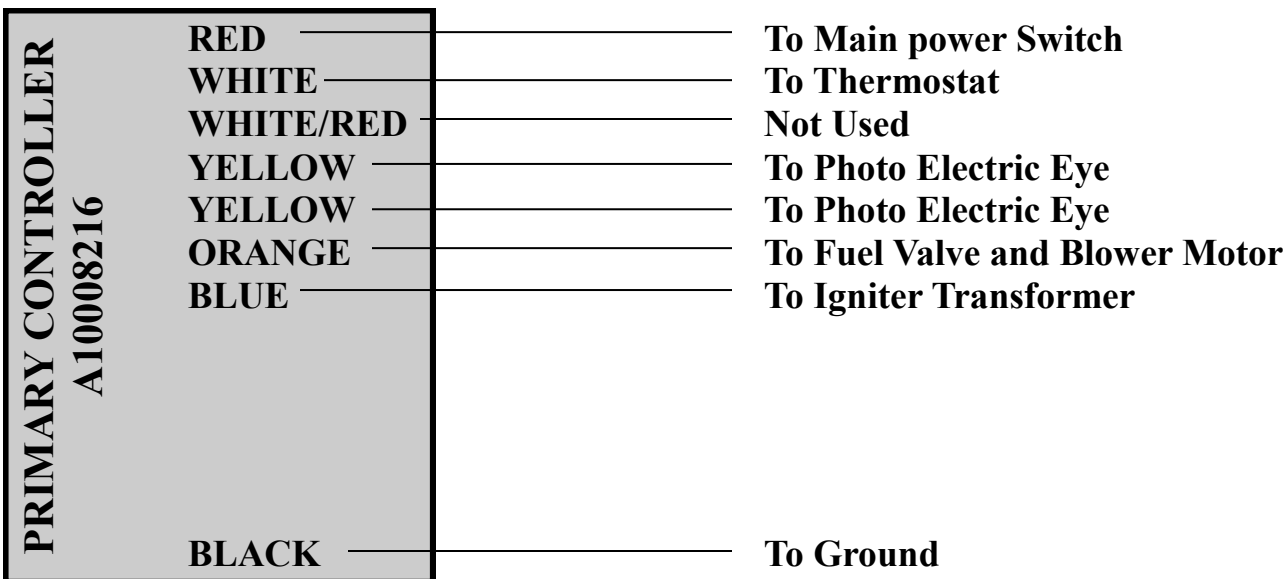


# **TROUBLE SHOOTING**

# **Diesel Burner**

## **Photo Electric Eye**

**NOTE:** *The Photo Electric Eye can be bench tested for proper operation using an ohm meter. Assure the lens of the Photo Electric Eye is clean prior to testing.*

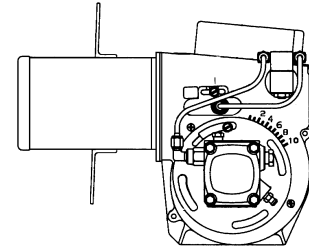

1. Block off all light to the Photo Electric Eye. Test across the leads with your ohm meter; you should get an infinite resistance reading (a lot of resistance).
2. Point the Photo Electric Eye at a light source, the brighter the light, the less resistance your ohm meter will show.

**CAUTION:** *Replace the Photo Electric Eye if it does not respond in this way.*

## **Fuel Valve**

**NOTE:** *The Fuel Valve can be bench tested for proper operation using an automotive type 12 volt battery as a power source.*

1. Disconnect the two leads and remove the fuel lines from the fuel valve.
2. The valve should be closed when no power is available.
3. Apply 12 volts to the two leads and the valve should open.


**CAUTION:** *Replace the fuel valve if it does not respond in this way.*

## **Ignition Transformer**

**WARNING:** *Shock hazard, high voltage up to 20,000 volts.*


1. Assure that 12 volts is being supplied to the transformer during the ignition cycle. (Refer to the Primary Controller tests.)
2. Check electrode condition and adjustment. Replace or adjust as necessary.

**CAUTION:** *Replace ignition transformer if unit won't produce sparks.*

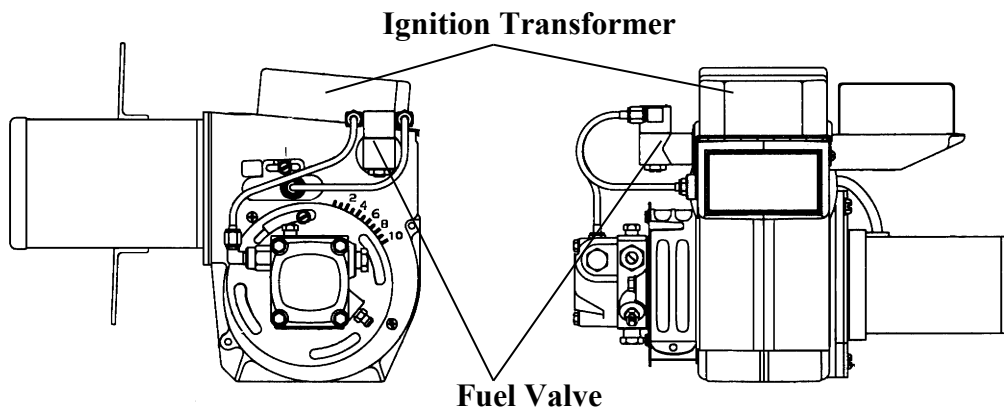

# TROUBLE SHOOTING

# LP Burner Spark Ignition

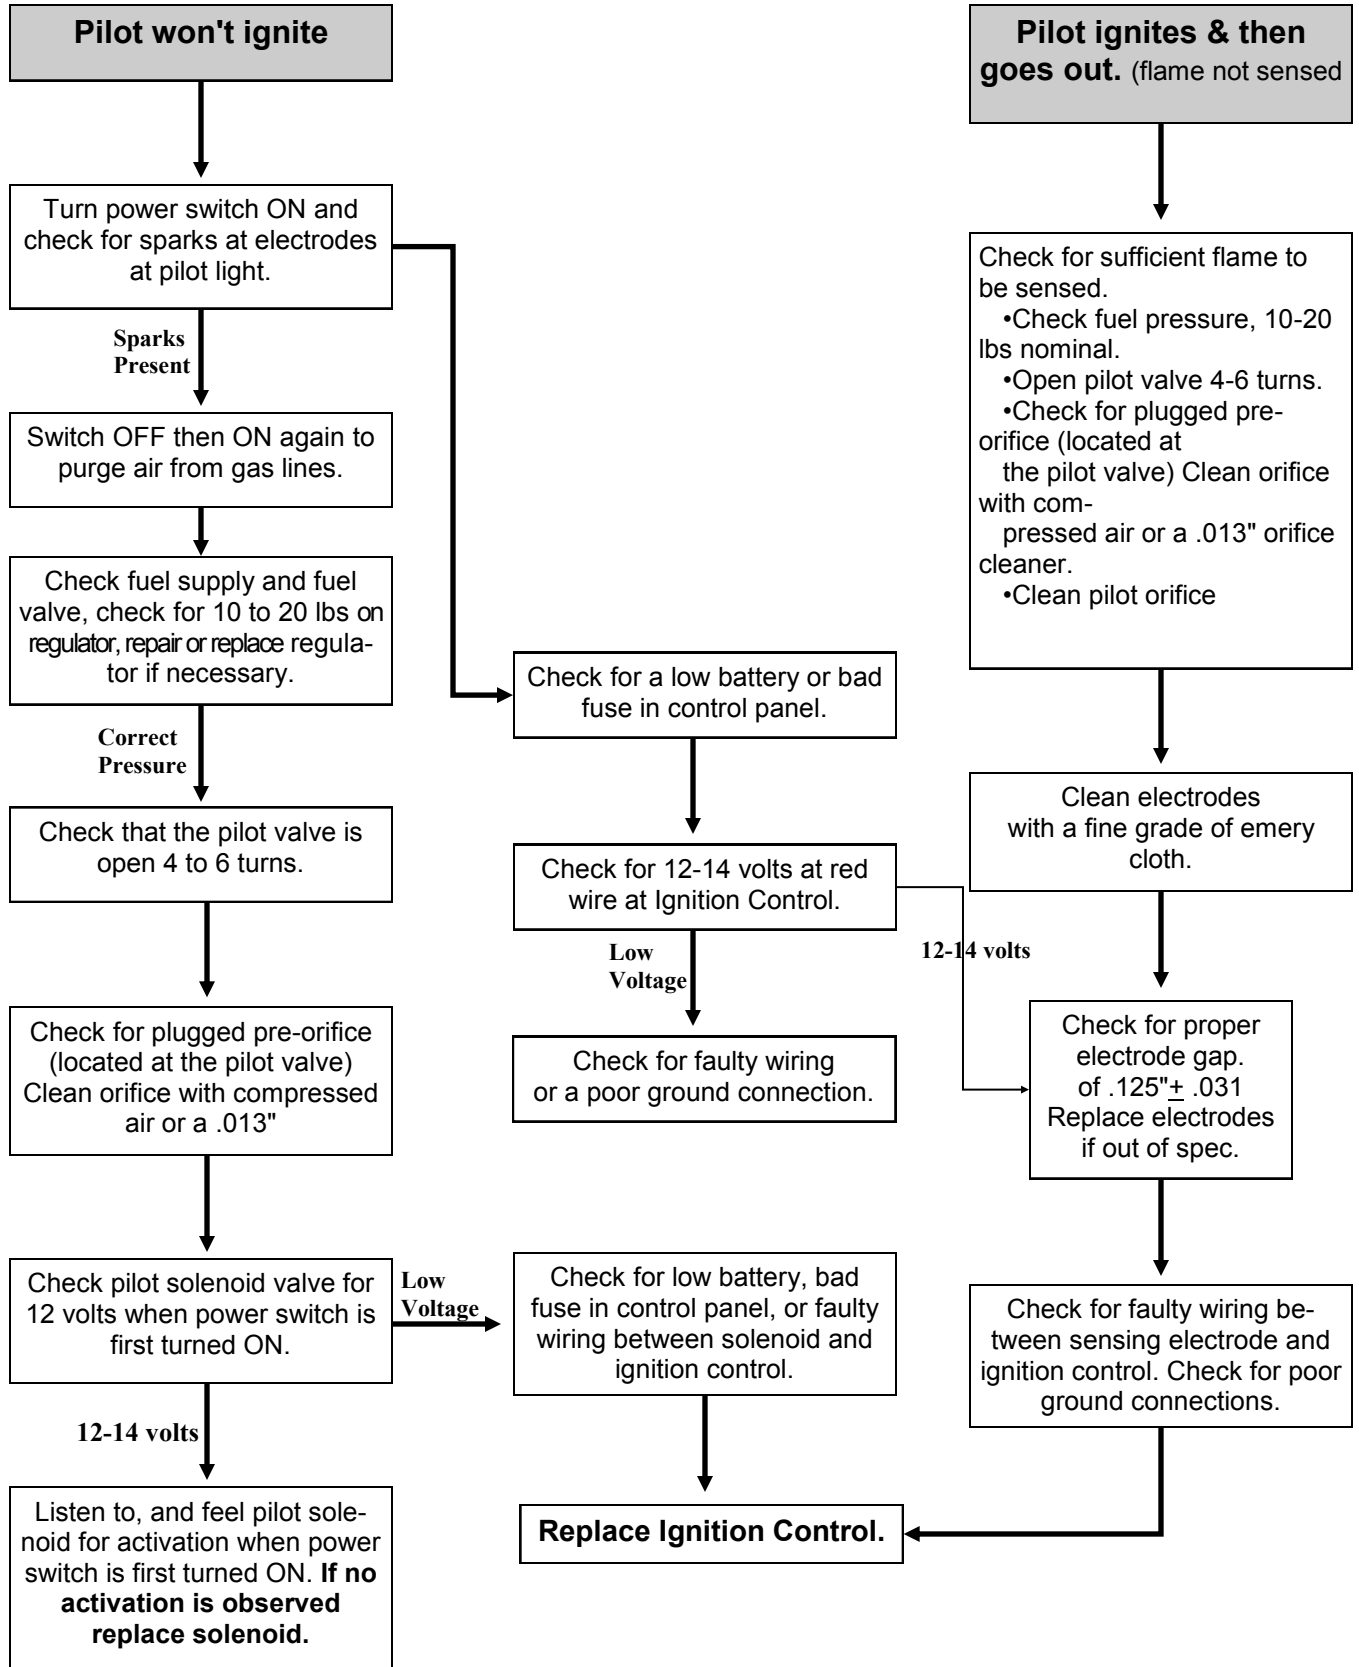

## Fuel Valve Solenoid

The fuel solenoid valve needs to be removed to perform this test. 12 volts applied to the fuel solenoid valve activates an electromagnet that pulls the valve open. With no power applied, a spring pushes the valve closed. Blow through the valve to verify proper operation. Replace valve if not functioning properly.

## Fenwal Ignition Control

The Fenwal Ignition Control creates sparks at the electrodes for igniting the pilot light, and supplies power to the fuel valve at the appropriate times. The controller receives voltage from either the thermostat or main power switch (depending on the system) to begin operation. A flame sensing circuit is incorporated for control of the fuel valve if the flame goes out.


When the power switch is turned on, or when the thermostat calls for heat, a 12 volt signal is sent to the controller. The controller will then create sparks at the electrodes. At the same time, the controller also sends a 12 volt signal to the fuel valve causing it to open. This allows fuel into the pilot light and it is ignited by the sparks at the electrodes.

The flame sensing circuit will signal the controller that ignition was successful. The controller will then shut off the sparks. The fuel valve will remain open to keep the flame burning.

If the controller does not sense a flame within approximately six to seven seconds, it will shut off the fuel supply and the sparks. The controller will then "lock out".

If the flame should go out for any reason, the controller will try for re-ignition, if re-ignition is not successful in six to seven seconds, the controller will "lock out".

If a lock out situation occurs, the main power switch must be shut off, then on again, to reset the system. (continued on next page)

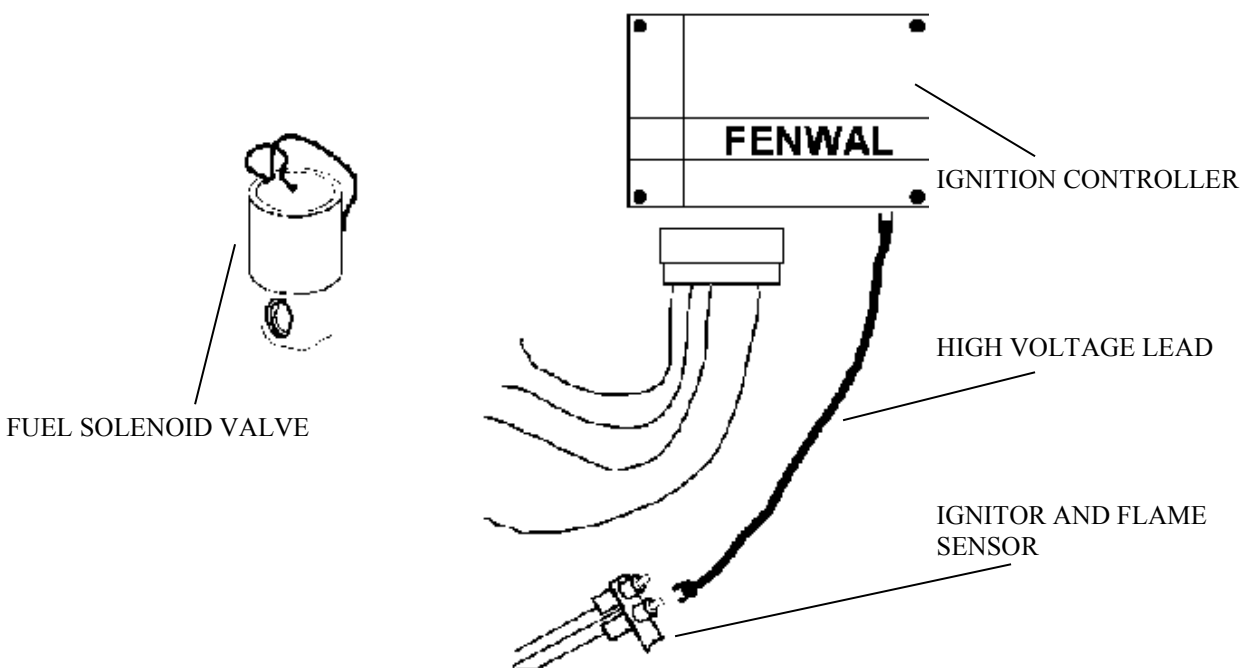


## **TROUBLE SHOOTING**

## **Fenwal Ignition Tests**

### **Fenwal Ignition Control**

The Ignition Controller can be tested for proper operation using an automotive type 12 volt battery as a power source. A propane torch, and a 12 volt test light will also be needed. Do not use a digital volt/ohm meter, as it may give false readings for these tests.

1. Disconnect wires as necessary to perform these tests. Mark all wires for proper reassembly.
2. Connect one lead of your test light to the brown wire from the fuel valve. Connect the other lead to neg. ( - ) terminal of battery.
3. Be sure the yellow wire from the controller is connected to ground. (neg. terminal of battery).
4. While observing your test light, apply power to the red wire on the controller by turning on the main power switch and thermostat (if equipped). The test light should light up and sparks will be present at the electrodes for approximately six seconds, then the controller should "lock out." The sparks will stop and the test light will go out.
5. Repeat step #4, only this time direct flame from a propane torch across the sensing and ground electrodes two seconds after applying power to the controller.
6. The sparks should stop and the brown wire (fuel valve) should show voltage as long as the flame is directed across the electrodes.
7. Remove the flame and the sparks should reappear for six seconds; this is the trial for re-ignition. If the flame is not re-established, the system "locks out".
8. Be certain all wiring is correct and undamaged, then replace the controller if it fails any of these tests.

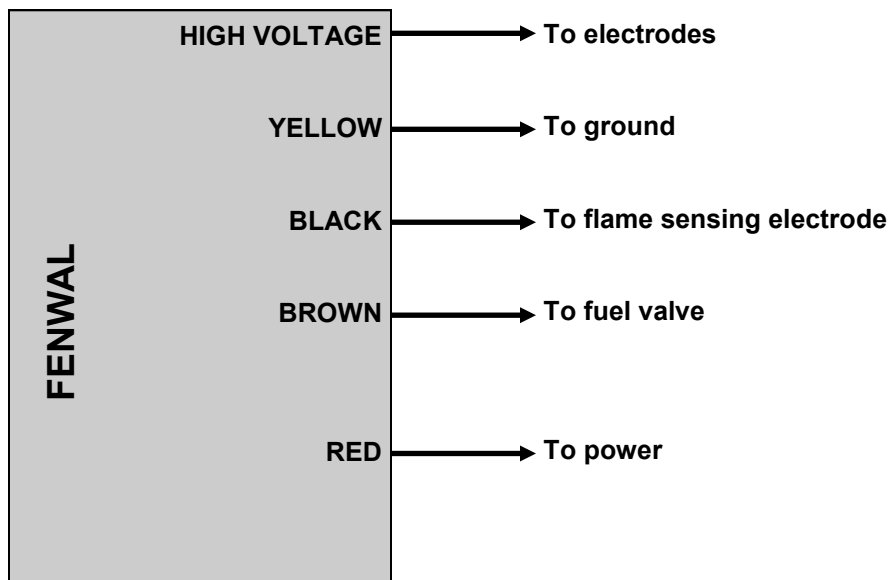






**CHECK ALL  
PARTS!**

# REPLACEMENT PARTS

# 12V Diesel Burner

Original Equipment Replacement Parts

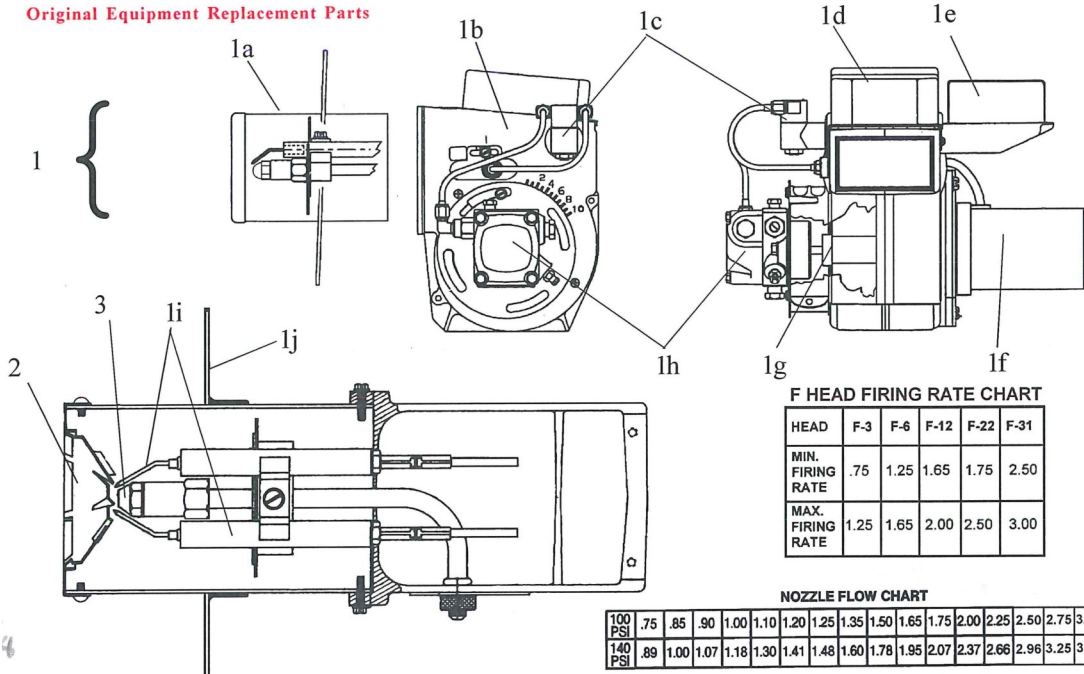

F HEAD FIRING RATE CHART

HEAD	F-3	F-6	F-12	F-22	F-31
MIN. FIRING RATE	.75	1.25	1.65	1.75	2.50
MAX. FIRING RATE	1.25	1.65	2.00	2.50	3.00

NOZZLE FLOW CHART

100 PSI	.75	.85	.90	1.00	1.10	1.20	1.25	1.35	1.50	1.65	1.75	2.00	2.25	2.50	2.75	3.00
140 PSI	.89	1.00	1.07	1.18	1.30	1.41	1.48	1.60	1.78	1.95	2.07	2.37	2.66	2.96	3.25	3.55


ITEM	QTY	DESCRIPTION	PART#
1	1	Burner assembly w/ Primary Control (less fuel retention head and nozzle)....	A10008215
1	1	Burner assembly, complete w/ fuel retention head and nozzle.....	A10008105-002
1a	1	Air Tube .....	509070
1b	1	Photo electric eye (under ignition transformer)	
		-With Connectors .....	A10007678
		-Without Connectors .....	P10007720
1c	1	Valve, fuel control.....	509091
1d	1	Ignition Transformer .....	509087
1e	1	Primary Controller.....	P10001034
		-Weather Pack/Weather Pack.....	A10007216
		-Weather Pack/CPC New Style.....	A10008216
1f	1	Motor, blower.....	509092
1g	1	Coupling, pump to motor .....	509086
1h	1	Pump, burner fuel.....	509094
**	1	Pump, burner fuel- Internal Fuel Shut-off Valve.....	509109
1i	1	Electrode, igniter set.....	509089
1j	1	Mounting Flange .....	509071
**	1	Blower Fan Wheel.....	509069
2	1	Fuel retention head, F31 (for 2.5 to 3.0 gph).....	P10005133
3	1	Nozzle, 2.5 gph. 80° .....	P10005129
**	1	Fuel Filter Element.....	509078

\*\* Not Shown

Note: Indented item numbers with letter suffix are included with preceding item number.  
Nozzle GPH rated at 100 psi. Match nozzle and fuel retention head with that installed.

# REPLACEMENT PARTS


# Thermostat

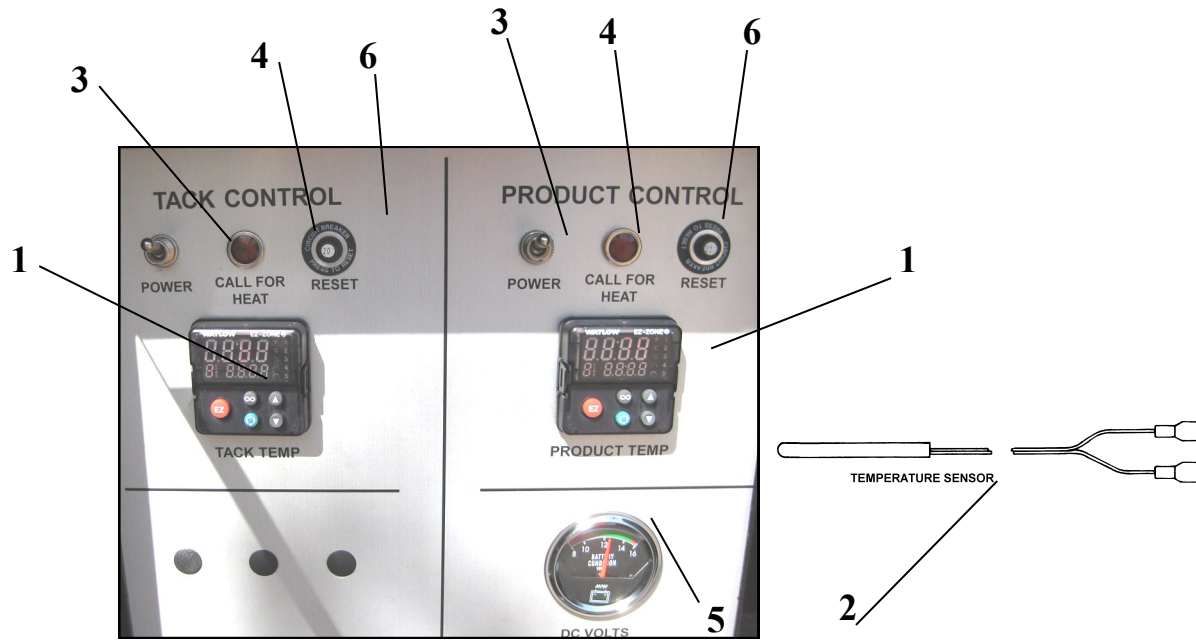

ITEM	QTY	DESCRIPTION	PART#
1	-	Thermostat, Watlow 0-550°, (12volt)	P10003540
2	-	Sensor, RTD Watlow 0-550°, (12volt)	A10001017
3	-	Switch- SPST Toggle ON/OFF	P10000180
4	-	Light- Call For Heat 12V	P10000181
5	-	Volt Meter	P10000184
6	-	20 Amp Breaker	P10000179
** Not Shown			

# REPLACEMENT PARTS

# Alternator & Hyd Pump Drive

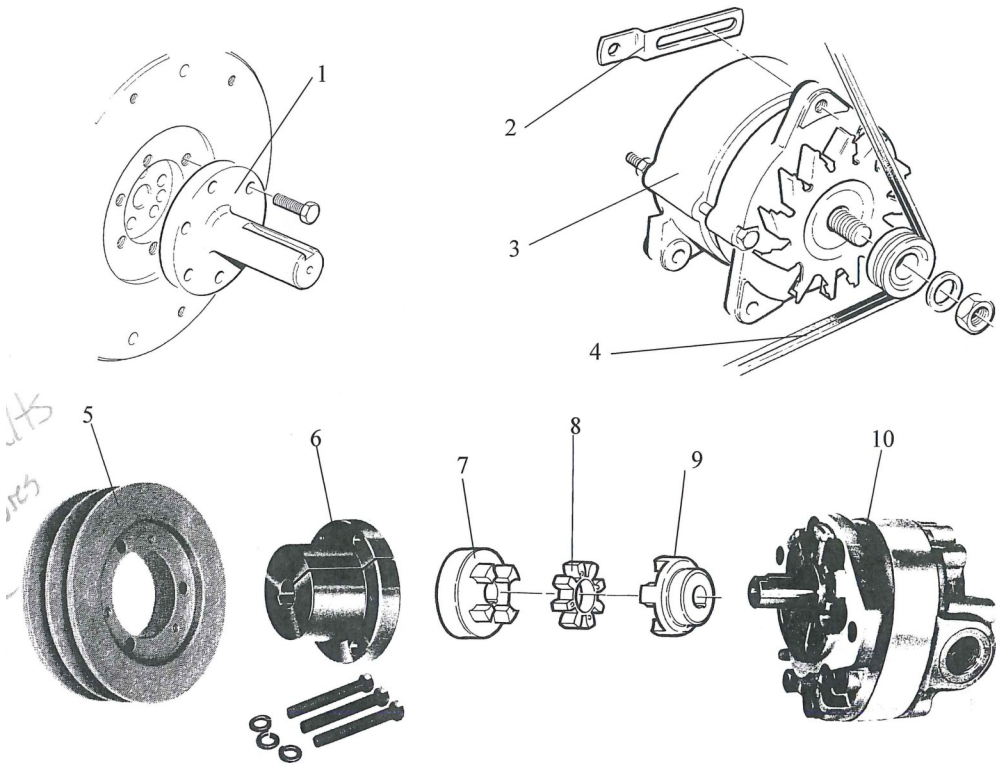


ITEM	QTY	DESCRIPTION	PART #
1	1	Stub Shaft, Z482 diesel engine only .....	901230
2	1	Adjusting Bracket, alternator, for Z482 diesel engine only .....	Call
3	1	Alternator, 24 volt .....	526058
4	2	V-Belt, alternator, Z482 diesel engine 4L370 .....	514013
	2	V-Belt, alternator, gas engine 4L400 .....	514011
5	1	Rear Mounted Alternation Pulley .....	514020
6	1	Rear Mounted Alternation Bushing, Pulley (includes bolts).....	514022
7	1	Coupling Half, 1" bore .....	P10002014
8	1	Spider .....	P10002016
9	1	Coupling Half, 5/8" bore, Z482 diesel engine.....	P10004548
	1	Coupling Half, 9/16" bore, used with gas engine.....	507066
10	1	Pump, Hydraulic, Z482 diesel engine .....	P10002735
	1	Pump, Hydraulic, used with gas engine .....	510064

Note: Illustrations are for parts identification only. Illustrations may not represent actual parts.

# REPLACEMENT PARTS

# Heated Spray Wand

For Tack Coating

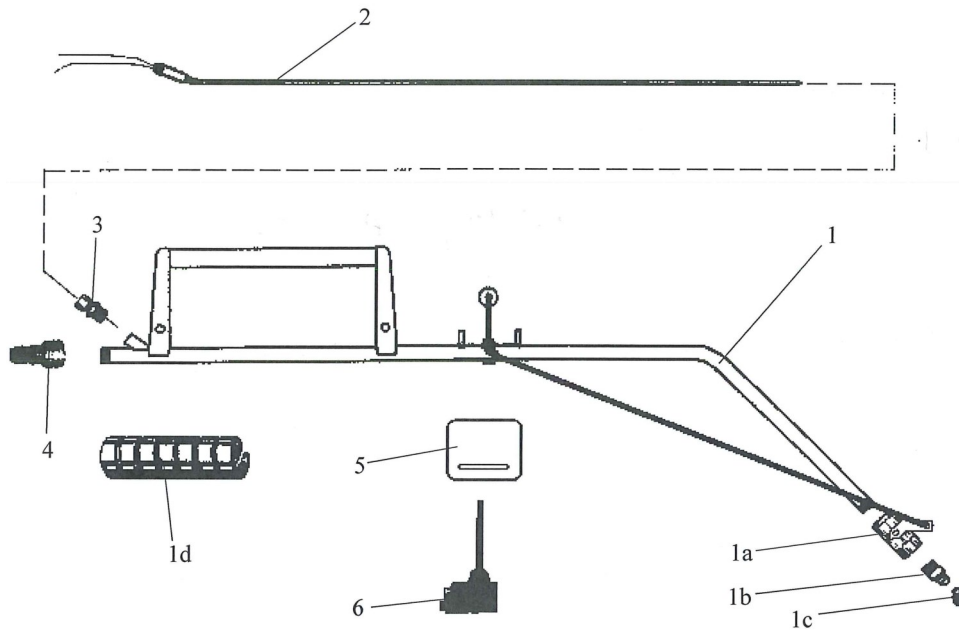


ITEM	QTY	DESCRIPTION	PART #
1	1	Steel Wand Assembly with twist handle .....	204051
	1	Aluminum Wand, light weight with twist handle .....	204052
1a	1	Valve (with lever) .....	517006
1b	1	Bushing, 3/4 x 1/4 .....	P10004952-005
1c	1	Spray Nozzle .....	P10002943
1d	10 ft.	Insulating Wrap, wand .....	P10006481
2	1	Heating Element, wand, with 2-pin connector (replaces 526074) .....	A10009936
		(mating connector half requires one of 526302)	
3	1	Compression Fitting .....	P10007846-002
4	1	Quick Coupling, male .....	P10009966
5	1	Mounting Bracket, switch (pump saver option only) .....	902030
6	1	Switch, pump saver (pump saver option only) .....	526057

Indented item numbers with a letter suffix are included with preceding item number.

Note: Illustrations are for parts identification only. Illustrations may not represent actual parts.

# REPLACEMENT PARTS

# Twist Spray Wand

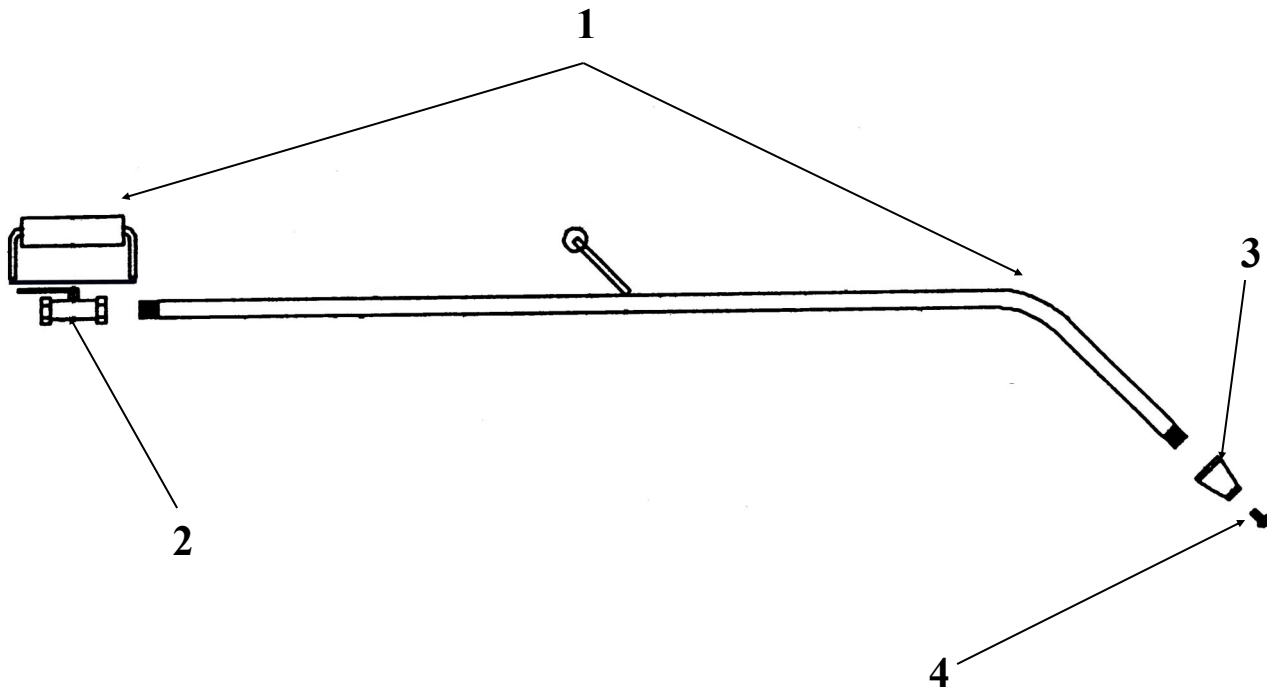


ITEM	QTY	DESCRIPTION	PART #
1	1	Wand Assembly Complete, Steel (Includes Item 1-4)	204004
2	1	2 Port Valve, Brass, 3/4"	517012
3	1	Coupling 3/4 to 1/4	513809
4	1	Veejet Nozzle, H1/4W-9508	520060

Note: Illustrations are for parts identification only. Illustrations may not represent actual parts.

# REPLACEMENT PARTS

# Heated Hose

For Oil Jacketed Kettles Manufactured 1998 and earlier

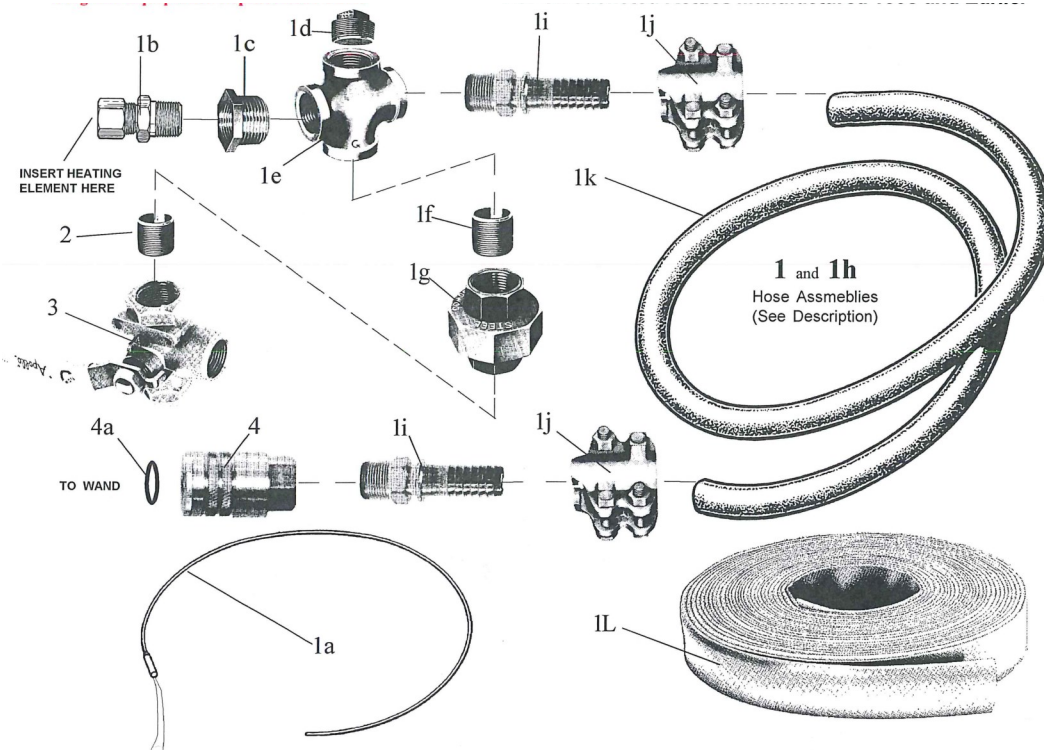

ITEM	QTY	DESCRIPTION	PART #
1	1	8' Hose Assembly with heating element.....	523089
	1	12' Hose Assembly with heating element.....	523093
1a	1	Compression Fitting 3/8".....	M10009910
1b	1	8' Heating element, for hose, includes **connector.....	A10009933
	1	12' Heating element, for hose, includes **connector.....	A10009934
1c	1	8' Hose Assembly, less heating element.....	A10007890-087
	1	12' Hose Assembly, less heating element.....	A10007890-137
1d	AR	Safety Jacket, specify length.....	P10008320
1e	2	Clamp assembly.....	523087
**	1	Wire Harness & Connectors (in hose jacket)	
		-8'.....	A10008324-087
		-12'.....	A10008324-137
		-15'.....	A10008324-177
		-20'.....	A10008324-237
2	1	Bushing, reducing.....	P10004952-009
3	1	Bushing, reducing.....	P10004952-011
4	1	Quick Coupling, female.....	P10009965
4a	1	Seal, quick coupling.....	509999
**	1	1/2" Compression Fitting (for 15', 20' hoses, & 62" elements).....	M10011276

\*\* - Not Shown


Indented item numbers with a letter suffix are included with preceding item number.

Note: Illustrations are for parts identification only. Illustrations may not represent actual parts.

# REPLACEMENT PARTS

# Product Pump Drive Line

QJK 50, 75, 120, 125

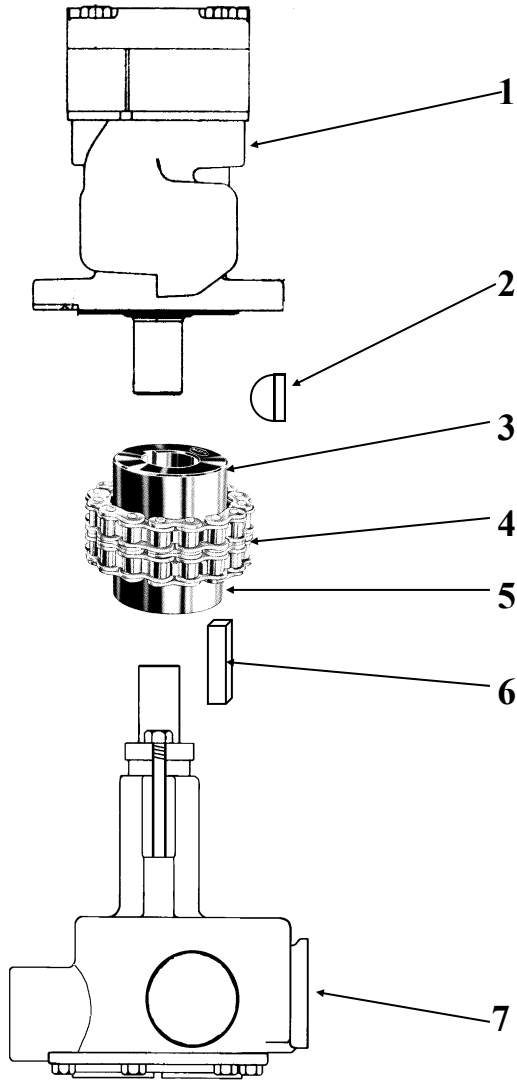


ITEM	QTY	DESCRIPTION	PART #
1	1	Motor, Hydraulic.....	510061
2	1	Woodruff Key, 1/4" x 1"R.....	522048
3	1	Chain Coupling Half, 3/4" bore .....	P10004555-002
4	1	Coupling Chain, 4016 .....	P10004556
5	1	Chain Coupling Half, 1" bore .....	P10004555-004
6	1	Drive Key, 3/16" x 1 1/2"L .....	P10002018
7	1	Product Pump (refer to parts break-down page) .....	515063

Note: Illustrations are for parts identification only. Illustrations may not represent actual parts.



# REPLACEMENT PARTS

# HL32 Product Pump

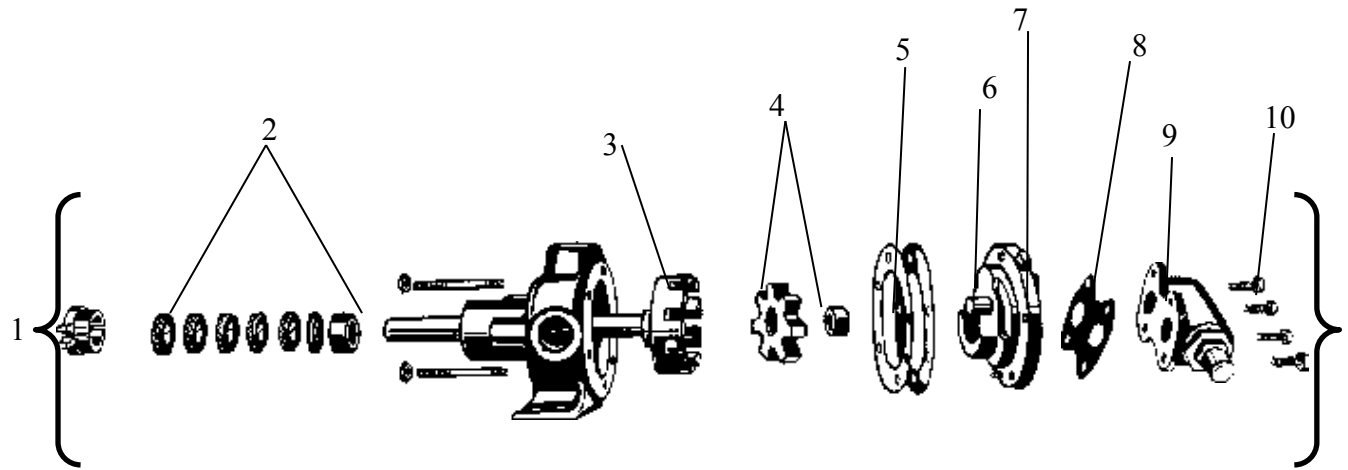


ITEM	QTY	DESCRIPTION	PART#
1	1	Oil Pump, complete with RV	515006
2	5	Packing seal, shaft	515019
3	1	Rotor and Shaft	515031
4	1	Idler with bushing	515015
5	1	Bushing	515053
6	1	Gasket set, head - (for setting end clearance)	515016
7	1	Idler Pin	515052
8	1	Head (includes # 6)	515028
9	1	Gasket, relief valve	Description & Serial #
10	1	Relief Valve	515055

Note: Illustrations are for parts identification only. Illustrations may not represent actual parts. Items without part numbers are available by giving the part description and the serial number of the equipment.

# REPLACEMENT PARTS

# Chassis

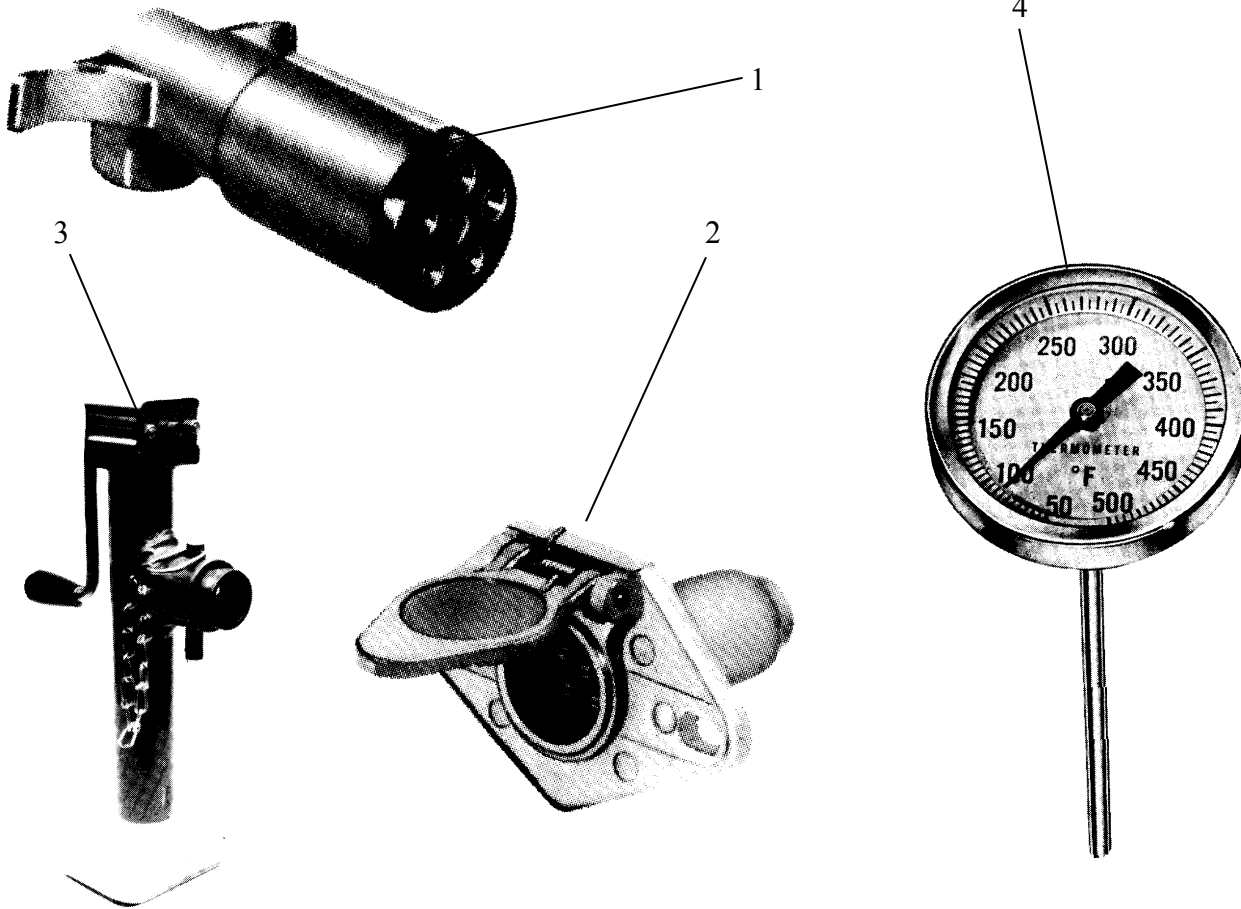


ITEM	QTY	DESCRIPTION	PART#
1	1	Connector, male, 6 prong round	526015
	1	Connector, male, 7 prong round	526043
2	1	Connector, female, 6 prong round	526031
	1	Connector, female, 7 prong round	526017
00	1	Tail Light assembly, right side	Call
00	1	Tail Light assembly, left side	Call
00	2	Marker Light assembly, side	Call
00	1	3-Light Bar assembly, center rear (required on OJK 400 only)	524007
3	1	Screw Jack	501052
00	1	Ring Hitch (not for hydraulic brakes)	901012
00	1	Ball Hitch, 2 5/16"	901038
00	1	Ring hitch-model 10 actuator, hydraulic brakes, OJK 165 and 250	901317
00	1	Break-away safety switch assembly	501049
4	1	Thermometer, 550 F. with 6" stem	516001

Note: Illustrations are for parts identification only. Illustrations may not represent actual parts.

# REPLACEMENT PARTS

# Brakes & Axles

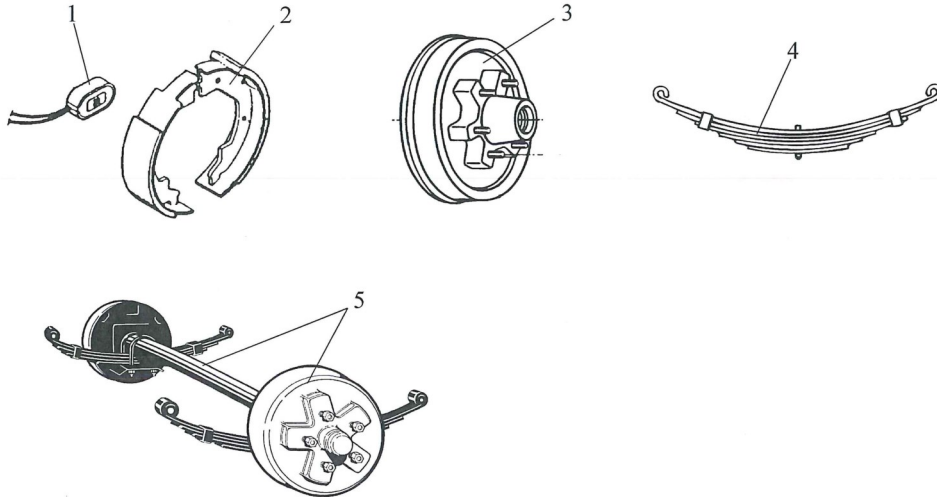

ITEM	QTY	DESCRIPTION	PART#
1	1	Magnet, electric brake (1 required for each wheel).....	Give Serial #
2	1	Brake Shoe Set (1 set required for each wheel) .....	Give Serial #
3	1	Brake Drum and Hub assembly (1 required for each wheel) .....	Give Serial #
4	1	Leaf Spring assembly (1 required for each wheel).....	Give Serial #
Complete replacement axle assemblies are available and include brakes, hubs, and springs.			
5	1	Axle assembly, complete, 648duh, hydraulic brakes, for OJK 165 .....	501067
	1	Axle assembly, complete, 648due, electric brakes, for OJK 165 .....	501032
	2	Axle assembly, complete, 348duh, hydraulic brakes, for OJK 250 .....	501082
	2	Axle assembly, complete, 348due, electric brakes, for OJK 250 .....	501046
	2	Axle assembly, complete, 660due, electric brakes, for OJK 400 .....	501006
*	4	Wheel, 5 Hole, for OJK 50, 75, 120, 250.....	518015
*	2	Wheel, 6 Hole, for OJK 165 .....	518016

\* - Not Shown

Note: Illustrations are for parts identification only. Illustrations may not represent actual parts.

### ORDERING INFORMATION:

**Orders for suspension parts must include the equipment serial number.**

**Orders for brake parts must include the equipment serial number and brake drum dimensions. (diameter and width) Also specify electric or hydraulic brake system.**

### NHTSA Reporting Safety Defects

If you believe that your vehicle has a defect in which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying STEPP MANUFACTURING CO., INC..

If NHTSA receives similar complaints, it may open an investigation and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or STEPP MANUFACTURING CO., INC..

To Contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or Write to: NHTSA, US Department of Transportation, 1200 New Jersey Ave., S.E., Washington DC 20590. You can also obtain information about your motor vehicle safety from <http://www.safercar.gov>.





# Consumer Warranty Guide



## Introduction

Congratulations on your purchase of equipment built by Stepp Manufacturing for your asphalt maintenance needs. Your equipment has been designed and constructed to give you the most in performance, ease of use, and reliability. It is our desire that you will find operating the equipment both productive and profitable.

## Warranty Procedures Through A Dealer

If your equipment requires repair, or needs parts for repair, please contact your area dealer. For repairs, the unit must be brought to the dealer for warranty. The dealer will require purchase date information, where the machine was purchased, and the Vehicle Identification Number (VIN) of the equipment. This information is needed so the dealer can submit a warranty claim. The dealer will repair your equipment, once warranty is approved, at no charge to you under the provisions of the warranty policy.

## Warranty Procedures Direct Through The Factory *(when no servicing dealer is available in your area)*

### Contact Stepp Manufacturing's Customer Service Department at (651) 674-4491.

In this situation, it may be advantageous for you to repair the machine and be reimbursed direct from the factory for warranty repairs. If you do not have the facilities, or the technicians, to perform the repair, the unit can be brought to a local repair facility. In either case, Stepp Manufacturing **MUST** be contacted and authorize the warranty repair **PRI-OR** to any work being performed. If work is done prior to authorization, the warranty will not be honored.

If parts are required for the warranty repair, contact Customer Service at Stepp Manufacturing for replacements. When warranty replacement parts are shipped to you, a Warranty Authorization Number will be issued. If asked to return the defective parts, "tag" the defective parts with the Warranty Authorization Number, then package them in the same box the new parts were shipped in. Ten (10) business days will be allowed for return of the defective parts. If the defective part is not received back at the factory within this allotted time, the warranty will not be honored.

You will be billed for all parts shipped that require returning of defective parts. However, when the defective parts are returned and evaluated, you will receive credit for the cost of the part only. Thus, it is important that all defective parts are turned to Stepp Manufacturing in the allotted ten (10) day period.

## Engine Warranty Claims

When a warranty issue develops with the engine, bring the unit to the engine manufacturer nearest authorized service center for repair. Be prepared to supply them with proof of purchase information with purchase dates.

Stepp Manufacturing cannot process engine warranty claims. However, we will be happy to offer assistance in locating the nearest service center.

## Equipment Owner Responsibilities

As the equipment owner, you are responsible for:

- Using the equipment in accordance with the correct operating procedures as shown in the operators manual.
- Assuring all maintenance items are completed in accordance with the operators/maintenance manuals.
- Transporting the equipment to the place where warranty repairs can be completed.
- Supplying purchase date and VIN information to establish warranty coverage.



**General Warranty Statement**  
**Stepp Manufacturing's One (1) Year Limited Warranty**

Stepp Manufacturing Co., Inc. hereby warrants, to the original purchaser of new equipment, that products manufactured by Stepp Manufacturing will be free from defects in material and workmanship for a period of one (1) year from the date of purchase from Stepp Manufacturing.

Stepp Manufacturing, at its discretion, will provide for the repair or replacement of any part found, upon examination by Stepp Manufacturing, to be defective, except as noted below. Such repair or replacement shall be free of charge to the original purchaser of new equipment for a period of one (1) year from the date of purchase, except as noted below.

**No warranty is extended to cover:**

- Product pump wear or damage caused by foreign objects.
- Routine maintenance, cleaning, and adjustments.
- Parts or components that have been altered, misused, improperly adjusted, or improperly maintained.
- Transportation to and from the place of warranty repair.
- Removal of materials from equipment.

**The following items are covered solely by their manufacturer's warranty:**

- Engines
- Hydraulic components
- Burners
- Pumps
- Axles
- Tires
- Other component parts not solely manufactured by Stepp Manufacturing

**The following items are covered by a pro-rata warranty:**

- Hoses that carry heated materials
- Heating elements for material hoses and wands

**Disclaimer of further warranty:**

Stepp Manufacturing makes no warranty, expressed or implied, other than this warranty. The implied warranties of merchantability and fitness for a particular purpose are hereby disclaimed. Repair or replacement of products or parts proving to be defective in material or workmanship shall be the exclusive remedy for breach of this warranty.

Stepp Manufacturing shall not be liable for incidental or consequential damages. Including, but not limited to, damages for inconvenience, rental or purchase of replacement equipment, loss of profits, or other loss resulting from breach of this warranty.

Stepp Manufacturing reserves the right to incorporate any changes in design into its products without obligation to make such changes on products previously manufactured.



**Twelve (12) Month Pro-Rata Limited Warranty  
Heated Asphalt Hose and Heating Elements**

*Effective for Equipment Delivered After 5/1/2012*

Stepp Manufacturing Co., Inc. hereby warrants to the original purchaser, on a pro-rated basis, that the heated asphalt hose and heating elements installed on NEW Stepp Manufacturing's equipment shall be free from defects in material and workmanship for period of twelve (12) months for the heated asphalt hose and six (6) months for the heating element.

In the event that a heated asphalt material hose or a heating element fails under normal use during the warranty period, Stepp Manufacturing will supply a replacement heated asphalt hose or heating element, along with one-half (0.5) hour for installation labor on a pro-rated adjustment basis.

- If the failure occurs under normal use within the first three (3) months from date of purchase, Stepp Manufacturing will supply a replacement, and provide for one-half (0.5) hour installation labor at no charge to the customer.
- If the failure occurs under normal use within the fourth (4th) through twelfth (12th) months, Stepp Manufacturing will supply a replacement, and provide for one-half (0.5) hour installation labor on a pro-rata basis.

The pro-rated adjustment is based on the total number of months elapsed since the purchase date of the new equipment from Stepp Manufacturing. This rate is then applied to the one-half (0.5) hour labor rate and the current suggested retail price of the proper replacement heated asphalt hose or heating element supplied by Stepp Manufacturing. This is the amount the customer will have to pay. Freight will not be included in the reimbursement. If a new heated asphalt hose or heating element is needed prior to warranty inspection, you will be billed for all parts shipped that require returning of defective parts. However, when the defective parts are returned and evaluated, you will receive credit for the cost of the part only. **Thus, it is important that all defective parts are turned in to Stepp Manufacturing in the allotted ten (10) day period, or warranty will be denied.**

In no case will the warranty coverage extend beyond the six (6) month period for the heating element or the twelve (12) month period for the heated asphalt hose, from the original purchase date of the new equipment from Stepp Manufacturing. *Physical damage is not covered by this warranty.* Physical damage may include, but is not limited to:

- Broken heating element (typically caused by repeated bending to less than a one (1) foot radius).
- Heated asphalt hoses burnt from the inside (typically caused by operating the heating element in an empty hose).
- External cuts or abrasions on the heated asphalt hose (typically caused by dragging on the ground).

The chart below shows the pro-rated amount, by percentage, that will be allowed by warranty, pending examination of the heated asphalt hose or heating element.

Heated Asphalt Hose		
Failure Date	Warranty's Responsibility	Customer's Responsibility
0-3 Months <i>0-90 Days</i>	100%	0%
3-6 Months <i>91-180 Days</i>	70%	30%
6-7 Months <i>181-211 Days</i>	60%	40%
7-8 Months <i>212-242 Days</i>	50%	50%
8-9 Months <i>243-273 Days</i>	40%	60%
9-10 Months <i>274-304 Days</i>	30%	70%
10-11 Months <i>305-335 Days</i>	20%	80%
11-12 Months <i>336-365 Days</i>	10%	90%
After 12 Months	0%	100%

Heating Element		
Failure Date	Warranty's Responsibility	Customer's Responsibility
0-3 Months <i>0-90 Days</i>	100%	0%
3-4 Months <i>91-121 Days</i>	60%	40%
4-5 Months <i>122-152 Days</i>	40%	60%
5-6 Months <i>153-180 Days</i>	20%	80%
After 6 Months	0%	100%





Warranty Claim Authorization Number: \_\_\_\_\_  
 Call Customer Service at 651-674-4491 to obtain prior approval or warranty will be denied.  
 Date of Authorization Request \_\_\_\_\_

Equipment Owner		Warranty to be Performed by	
Customer Name		Company Name	
Street Address		Address	
City/State/Zip		City/State/Zip	
Equipment Model #		Contact Name	
Equipment VIN		Contact Phone #	
Hour Meter Read			
Purchase Date		Date of Malfunction	
Dealer Purchased Form		Date of Repair	

Warranty Authorization		Signature for Authorization	
Date of Malfunction		X	
Date of Repair			

Symptoms / Diagnostics / Action		
Symptoms	Diagnostics	Action
<i>Describe the symptoms in detail, be as specific as possible. Ex: Burner ignites and runs for 35 seconds, then goes out.</i>	<i>Describe issues found, be as specific as possible. Ex: Part failed due to loose connection, resulting in misalignment and premature wear.</i>	<i>Describe action taken, be as specific as possible. Ex: Removed damaged section of wire harness, soldered new leads in place, and insulated splices w/ heat shrink tubing.</i>

Parts and Labor				
Labor Time to Correct Problem (reimbursed at \$55/hour)		Parts Used to Correct Problem		
Labor Time (in hours)	Repair Made	Part Number	Description	Qty

**Parts Return**

All parts returned must be tagged with the warranty authorization number and a copy of this claim. Retain all parts until credit is received from the factory. When requested, return the parts, along with this claim, to:

**Stepp Manufacturing Co., Inc.**  
**Attn: Warranty Department**  
**12325 River Road**  
**North Branch MN 55056**

**\*Note:** If defective parts are not returned within 10 days, or this warranty claim does not accompany the returned parts, the claim will be denied.


Office Use Only				
Date Claim/Parts Received?		Is this a warrantable claim?	Yes	No
Claim Reviewed By:		Original Invoice # for Parts		
Date of Review:				

Warranty Totals				



# SCHEMATICS


---

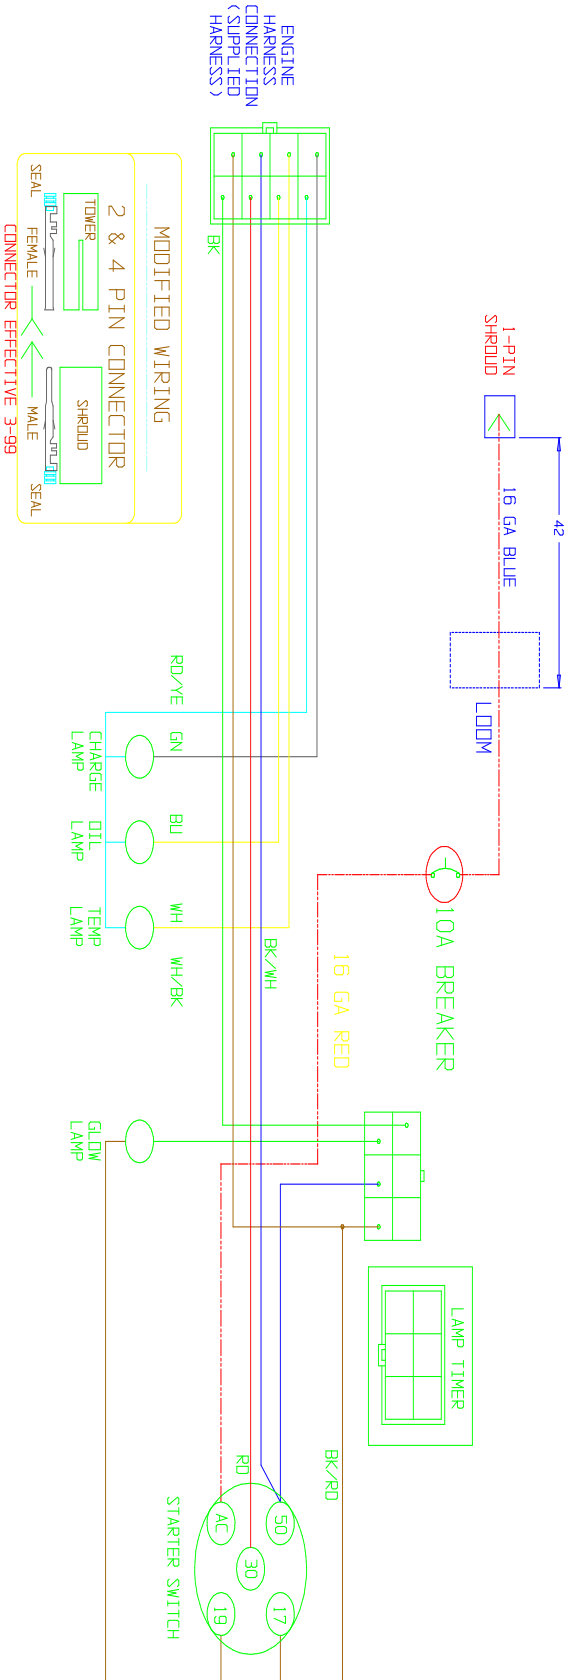


SHOP NOTES	MACHINE CODE	ROUTING:	PROJECT:
STANDARD SHOP TOLERANCE UNLESS OTHERWISE NOTED: ±1/16" & ±1"	LOCK FORMER: WIEDMANN: LARGE BRAKE:	CAGE CODE: 06447 DWN: 6/03 REV: INV NO: MAT'L L:	KABDTA 482 DIESEL ENGINE ENGINE COVER HARNESS FINAL DETAIL K482-MSL1
		AS NOTED	QTY: 1 JOB QTY:

**SMGT**  
 STEEP MFG CO INC  
 NORTH BRANCH, MN 55056  
 NOT TO BE REPRODUCED  
 IN ANY FORM WITHOUT THE  
 EXPRESSED WRITTEN PERMISSION  
 OF STEEP MFG CO INC

# ONE BURNER CONTROL WIRING

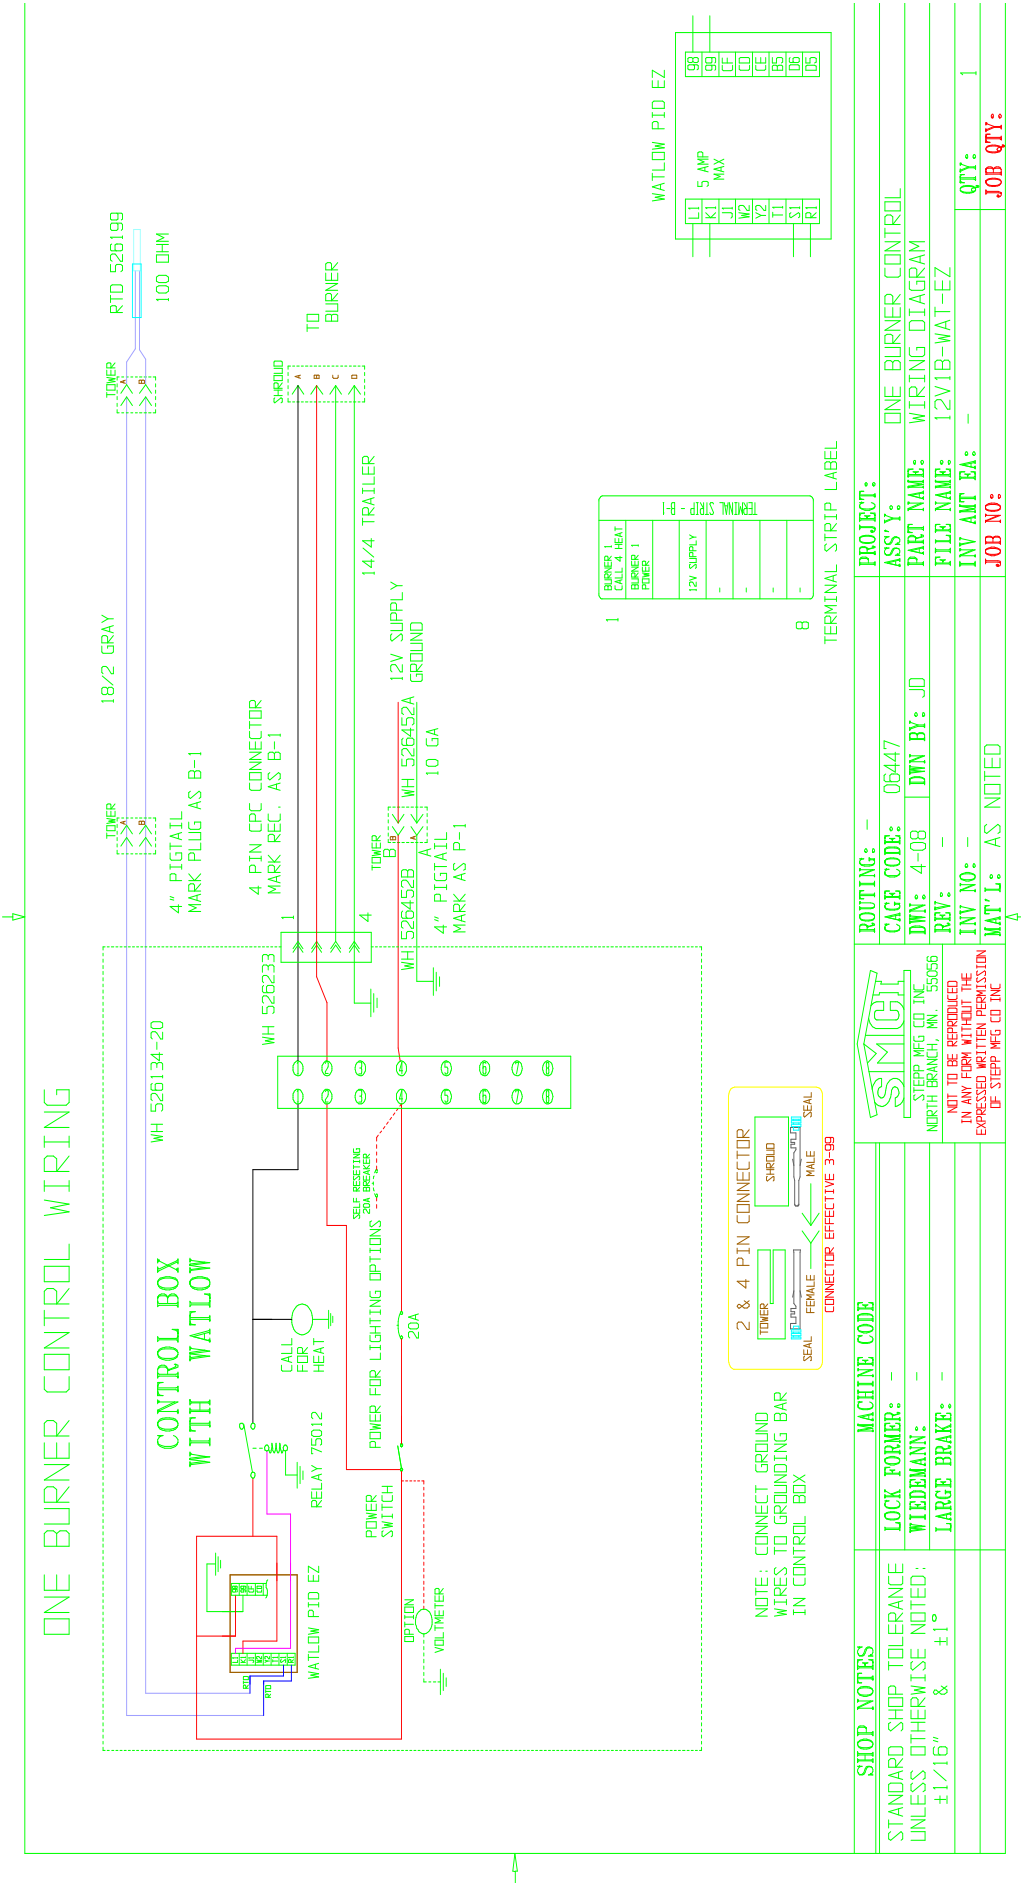

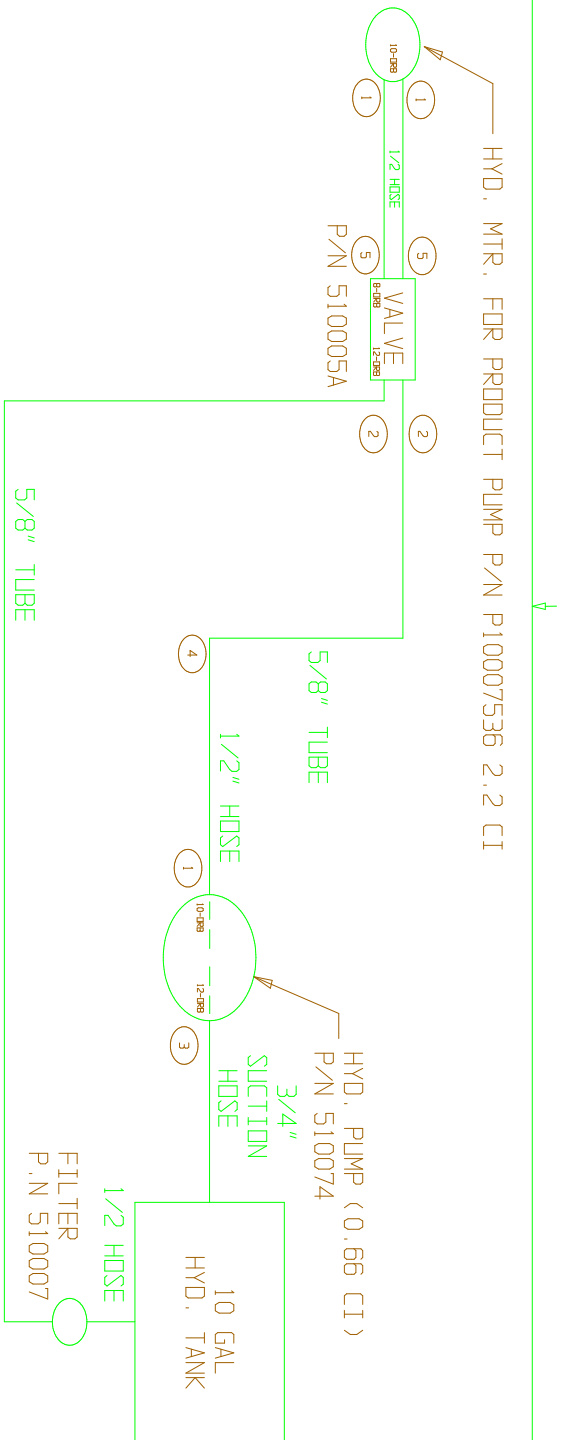


NOTE: USE HOSE FOR CONNECTION TO PUMP  
 USE STEEL TUBE FOR REST

ENGINE SPEED 3600 RPM  
 RELIEF 1000 PSI  
 HYD. PUMP .66 C.I.I.  
 PRODUCT PUMP MTR. 2.2 C.I.I.

- |   |                |                  |
|---|----------------|------------------|
| 1 | P100007827-010 | 10MDRB X 8MJIC   |
| 2 | P100007831-003 | 10MDRF X 12MDRB  |
| 3 | P100007827-017 | 12MJIC X 12MDRB  |
| 4 | P100008741-001 | 1/2 HOSE X 10MDF |
| 5 | P100007827-009 | 8MJIC X 8MDRB    |


<b>SHOP NOTES</b>		<b>MACHINE CODE</b>	
STANDARD SHOP TOLERANCE UNLESS OTHERWISE NOTED: ±1/16" & ±1°	LOCK FORMER: MIDDELMANN: LARGE BRAKE:	 SMT STEPP MFG CO INC NORTH BRANCH, MN. 55056 NOT TO BE REPRODUCED IN ANY FORM WITHOUT THE EXPRESSED WRITTEN PERMISSION OF STEPP MFG CO INC	
<b>ROUTING: -</b>		<b>PROJECT: SMT/SBE HWY KETTLE</b>	
CAGE CODE: 06447	ASS'Y: HYDRAULIC SYSTEM		
DMN: 3-10	DMN BY: JD	PART NAME: HYDRAULIC SYSTEM	
REV: -		FILE NAME: 201121A	
INV NO: -		INV AMT BA: -	QTY: 1
MAT'L: SEE B.O.M.		JOB NO:	JOB QTY:

# Z482 KUBOTA DIESEL COVER WIRING. VIEW FROM INSIDE COVER.




SHOP NOTES		MACHINE CODE		ROUTING: --	PROJECT: KABOTA 482 DIESEL ENGINE
STANDARD SHOP TOLERANCE UNLESS OTHERWISE NOTED: ±1/16" & ±1°	LOCK FORMER: WIEDEMANN: LARGE BRAKE:	CAGE CODE: 06447	DWN: --	ASS'Y: ENGINE COVER HARNESS	PART NAME: FINAL DETAIL
			REV: X	FILE NAME: 482DECW	INV AMT EA: --
			INV NO: --	SEE B.O.M.	QTY: 1
			MAT' L:		JOB NO:
					JOB QTY:

- WIRE KEY:
1. (WH) GROUND
  2. (BL) BRAKES
  3. (BN) TAILLIGHT
  4. (BK) POWER
  5. (YE) LEFT TRUN
  6. (GN) RIGHT TURN
  7. (RD) AUXILIARY
- CIRCUITS: MARKER 3 BN  
BRAKES 2 BL & 1 WH  
RT TAILLIGHT 3 BN & 6 GN  
LT TAILLIGHT 3 BN & 5 YE  
CONTROL BOX 4 BK & 1 WH

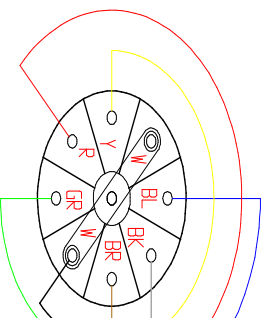


REAR JUNCTION BOX  
CONNECT COLOR TO COLOR

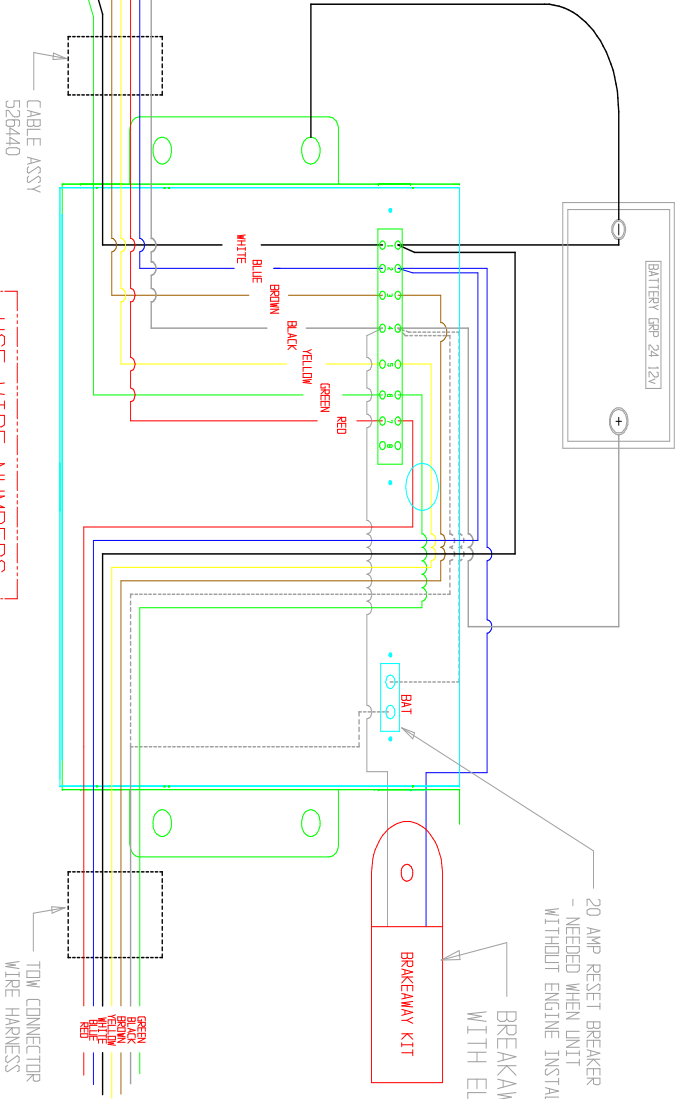

USE WIRE NUMBERS  
ON ALL WIRES

20 AMP RESET BREAKER  
- NEEDED WHEN UNIT  
WITHOUT ENGINE INSTALLED

BRAKEAWAY OPTION  
WITH ELECTRIC BRAKES

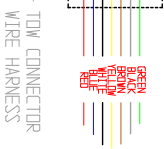

SHOP NOTES

STANDARD SHOP TOLERANCE  
UNLESS OTHERWISE NOTED:  
±1/16" & ±1°

MACHINE CODE

LOCK FORMER:  
WIDEMANN:  
LARGE BRAKE:



STEEPS MFG CO INC  
NORTH BRANCH, MN. 55056  
NOT TO BE REPRODUCED  
IN ANY FORM WITHOUT THE  
EXPRESSED WRITTEN PERMISSION  
OF STEEPS MFG CO INC

ROUTING:

CAGE CODE: 06447  
DMN: 12/03 | DMN BY: SGS  
RBV: 1/04  
INV NO:  
MAT'L: AS NOTED

PROJECT:

ASS'Y: FINAL LIGHTING  
PART NAME: WIRING DIAGRAM 2-LIGHT SYSTEM  
FILE NAME: 204090A  
INV AMT EA:  
JOB NO:

QTY: 1  
JOB QTY:



# **WATLOW PROGRAMMING**

---

# Watlow 12v Series PM Temperature Controller

## Operators Programming Sequence for 12 volt devices. PN EZ-ZONE– P1003540

This programming sequence is taken from the manufacturers programming manual for this controller and reduced to eliminate the non-essential entries. Please follow the entries carefully and if any questions arise because of misunderstanding the instructions, see your supervisor or call the factory for clarification. **To view the entire EZ-Zone PM Controller Users Manual, go to [www.watlow.com](http://www.watlow.com), search on *EZONE PM Users Manual*.**

If at any time during the entries you feel that you have entered an incorrect entry and want to restart the procedure from the beginning, simply press the Infinity key to return to Home Page from any page or parameter. After 60 seconds with no key presses, the controller reverts to the Home Page.



The EZ-Zone PM Controller has four menus that are used to determine the configuration and operation of the controller. They are the Home Page, Setup Page, Operations Parameters Page, and the Factory Page. If you are installing the EZ-Zone PM Controller, you will need to determine the proper settings for all pages. The controller is preset at the factory prior to delivery of the equipment and is ready for operations. Always confirm that the controller is programmed correctly and operating correctly under normal operating conditions.

**Caution:** Pay particular attention to the h.SP (High Temperature Set point) setting for max. product application temperature that is entered on the Setup Page at step 7-8.

**Do not set the High Temperature Set Point any higher than the product manufacturer maximum application temperature recommendations. Do not hesitate to ask your supervisor or call the factory for the correct setting if any questions or concerns arise.**

## Watlow Series PM-12 volt controller Sample Display Illustrations

- This display shows a typical temperature selection by the operator.
- Upper display shows actual product temperature in red color.
- Lower display shows operator desired maximum temp setting in green color.
- Set the desired maximum temp with the up and down keys.



**Operator will not be able to exceed the maximum temperature set point as shown in the programming procedure in the following pages.**

**Do not hesitate to ask your supervisor for the correct setting if any questions or concerns arise.**

# Watlow Series PM-12volt Temperature Controller

## Operators Programming Sequence for 12 volt devices

*This programming sequence is taken from the manufacturers programming manual for this controller and condensed to eliminate the non-essential entries for ease of setup. Please follow the entries carefully and if any questions arise because of misunderstanding the instructions, please call the manufacturer for clarification.*

If at any time during the entries you feel that you have entered an incorrect entry and want to restart the procedure from the beginning, simply press the up arrow and the down arrow at the same time to erase all entries and begin the procedure from the beginning.

### Menu Structure and Programming

The Series PM Controller has four menus that are used to determine the configuration and operation of the controller. They are the Home Menu, Setup Menu, Operations Menu and the Factory Menu. If you are installing the Series PM Controller, you will need to determine the proper settings for all menus. If the controller is already installed in the equipment that you have purchased, you may only need to set a few of the parameters to adjust the controller to your specific usage of the equipment. The Setup Menu displays the parameters that configure the Series PM Controller to fit your application. When installed on new equipment, the controller is preset at the factory prior to delivery of the equipment and is ready for operations. Always confirm that the controller is programmed correctly and operating correctly under normal operating conditions.

**Caution:** Pay particular attention to the h.SP setting for max. product temperature. Do not set any higher than the product manufacturer maximum application temperature. Do not hesitate to ask your supervisor for the correct setting if any questions or concerns arise.

# Watlow Series PM-12volt Temperature Controller

## Operators Programming Sequence for 12 volt devices

Home Menu:

### Procedure for programming the Series PM-12 volt Watlow Control.

- Step 1:** Connect all wires to Watlow control including RTD (temp sensor).
- Step 2:** Connect power to Watlow controller.
- Step 3:** Enter the Setup menu. (press both the **up and down** arrow keys for 6 seconds). **A1** will appear in the upper display and **SEt** will appear in the lower display.

**Note:** *You will have to pass through the Operations menu to get to the Setup menu. Hold the up and down arrow keys simultaneously for 6 seconds to step through the menus.*

- Step 4:** Once **A1** is in the upper display, and **SEt** is in the lower display, you are in the Setup menu. If not, press the **infinity key** to return to the Home page and redo step 3.

- Step 5:** Press the **Advance key**. Use the **up or down** keys to change values.

	<u>Parameter</u>	<u>Value</u>	<u>Description</u>	<u>Caution</u>
5-1	<b>SEn</b> <b>Advance key</b>	<b>ro.1H</b>	sensor type	<b>Do not enter { rl.OH }</b>
5-2	<b>rt.L</b> <b>Advance key</b>	<b>2</b>	RTD leads	
5-3	<b>FiL</b> <b>Advance key</b>	<b>0.5</b>	Filler type	
5-4	<b>i.Er</b> <b>Advance key</b>	<b>off</b>	error latching	
5-5	<b>dEC</b> <b>Advance key</b>	<b>0</b>	decimal	

- Step 6:** After pressing the **Advance key**, after parameter **dEC**, you will return to the parameter **.SEn**. Press the **infinity** key to return to the Setup menu. Display will show **{ Ai Set }**.

**Step 7:** Press either the **up or down** key to select the Loop submenu. **LOOP** will be in the upper display and **SEt** will be in the lower display. If this is shown, press the **advance key** to enter the Loop submenu. (once in the submenu, use the **up or down** key to change the parameter values).

	<u>Parameter</u>	<u>Value</u>	<u>Description</u>
7-1	<b>h.Ag</b> <b>Advance key</b>	<b>on.of</b>	<b>heat algorithm</b>
7-2	<b>C.Ag</b> <b>Advance key</b>	<b>off</b>	<b>cool algorithm</b>
7-3	<b>UfA</b> <b>Advance key</b>	<b>off</b>	<b>user fail action</b>
7-4	<b>fAiL</b> <b>Advance key</b>	<b>off</b>	<b>input error failure</b>
7-5	<b>LodE</b> <b>Advance key</b>	<b>no</b>	<b>open loop detect enable</b>
7-6	<b>rP</b> <b>Advance key</b>	<b>off</b>	<b>ramp action</b>
7-7	<b>L.SP</b> <b>Advance key</b>	<b>0 degrees</b>	<b>low temperature set point (degrees)</b>
7-8	<b>h.SP</b> <b>Advance key</b>	<b>250 or 550</b>	<b>high temperature set point (degrees)</b>
7-9	<b>SP.Lo</b> <b>Advance key</b>	<b>-100.0</b>	<b>set point, low limit open loop</b>
7-10	<b>SP.Hi</b> <b>Advance key</b>	<b>100.0</b>	<b>set point, high limit open loop</b>

**Step 8:** Pressing the **advance key** after parameter **SP.hi** will return you to the parameter **h.Ag**. Press the **infinity key** once to return to the setup menu.

**Step 9:** Use the **up or down** keys to select the output submenu. **otPt** will be in the upper display, and **SEt** will be in lower display. Press the **Advance key** to enter the submenu.

	<u>Parameter</u>	<u>Value</u>	<u>Description</u>
	(use the <b>up or down</b> key to change parameter values)		
9-1	<b>Fn</b> <b>Advance key</b>	<b>heat</b>	<b>Function</b>
9-2	<b>o.tb</b> <b>Advance key</b>	<b>20.0</b>	<b>time base</b>
9-3	<b>O.LO</b> <b>Advance key</b>	<b>0%</b>	<b>low power scale</b>
9-4	<b>o.h1</b> <b>Advance key</b>	<b>100%</b>	<b>high power scale</b>

**Step 10:** Pressing the **advance key** after parameter **o.h1** will return you to parameter **Fn**. Press the **infinity key** to return to the output submenu.

**Step 11:** Use the **up or down** keys to select the global submenu **gLbL** will be in the upper display and **SEt** will be in the lower display. Press the **advance key** to enter the global menu.

	<u>Parameter</u>	<u>Value</u>	<u>Description</u>
11-1	<b>C_F</b> <b>Advance key</b>	<b>F</b>	<b>display units</b>
11-2	<b>AC.LF</b> <b>Advance key</b>	<b>60</b>	<b>AC line frequency</b>

**Step 12:** After pressing the **advance key** at parameter **AC.LF** will advance you back to parameter **C\_F**. Press the **infinity key** once to return to the global submenu.

**Step 13:** Use the **up or down** keys to select the communication submenu. **Cor7** will be in the upper display and **SEt** will be in the lower display. Press the **advance key** to enter the communications submenu.

	<u>Parameter</u>	<u>Value</u>	<u>Description</u>
13-1	<b>Ad.5</b> <b>Advance key</b>	<b>1</b>	<b>Address Standard Bus</b>

**Step 14:** Pressing the **advance key** on parameter **Ad.5** will advance you back to the same parameter, **ie.** you will still see parameter **Ad.5** displayed. Press the **infinity key** once to return to the communications sub menu.

**Step 15:** Press the **infinity key** to return to the Home page.

**Step 16:** From the Home page, press both the **up and down** keys for (3) seconds, **Ai** will appear in the upper display and **oPEr** will appear in the lower display.

### Operations Page

**Step 17:** Once **Fli** is in the upper display and **oPEr** is in the lower display, you are at the Operations menu. If not, press the **infinity key** to return to the Home menu and redo step 16.

**Step 18:** Press the **up and down** keys until **LoOP** is in the upper display and **oPEr** is in the lower display. Press the **advance key** to enter the **LoOP** sub menu.

	<u>Parameter</u>	<u>Value</u>	<u>Description</u>
	<b>(use the up or down keys to change values)</b>		
18-1	<b>C.r7</b> <b>Advance key</b>	<b>auto</b>	<b>control mode</b>
18-2	<b>C.SP</b> <b>Advance key</b>	<b>75</b>	<b>closed loop setpoint</b>

	<u>Parameter</u>	<u>Value</u>	<u>Description</u>
18-3	<b>id.5</b> <b>Advance key</b>	75 degree F.	Idle set point
18-4	<b>h.hy</b> <b>Advance key</b>	3.0 degree F.	Heat hysteresis
18-5	<b>o.SP</b> <b>Advance key</b>	0.0%	Open loop set point

**Step 19:** Pressing the **advance key** at parameter **o.SP** will advance you back to parameter **C.r7**. Press the **infinity key** once to return you to operations Loop menu. Press the **infinity key** again to return you to the Home Page.

**Step 20:** Enter the Factory Page by pressing the **advance key** and **infinity keys** together and holding them for six (6) seconds. **CUSr** will be in the upper display and **FCty** will be in the lower display.

### Factory Page

**Step 21:** Once **CUSr** is in the upper display and **FCty** is in the lower display, you are in the Factory menu. If not, press the **infinity key** to return to the Home Page and redo step 20.

**Step 22:** Press the advance key if **CUSr** is in the upper display and **FCty** is in the lower display. The upper display will now read **1** and the lower display will read **CUSr**. Press the **advance key** again.

**Step 23:** The upper display will read **AC.Pu** and the lower display will read **PAr**. If the upper display does not read this way, use the **up and down** keys to change the value. Once the value has been changed, press the **infinity key** once.

**Step 24:** The upper display will read **1** and the lower display will read **CUSr**. Use the **up or down** keys to change the upper display to read **2**, press the **advance key**.

**Step 25:** The upper display will read **AC.SP** and the lower display will read **PAr**. If the upper display reads differently, use the **up or down** keys to change it to **AC.SP**. Once complete, press the **infinity key** once.

**Step 26:** The upper display will read **2** and the lower display will read **CUSr**. Use the **up or down** keys to change the upper display to read **3**. Press the **advance key** once.

**Step 27:** The upper display will read some parameter or other, and the lower display will read **PAr**. Use the **up or down** keys to change the upper display to read **none**.

Once complete, press the **infinity key**.



**Step 28:** Repeat steps 26 and 27 for display values of 4 through 20, changing each parameter to **nonE**.

**Note:** *The upper display will show the previous value you changed. You must increment this value from 4 through 20!*

**Step 29:** When all 20 parameters are set, press the **infinity key** once to return you to the main Factory Page, **CUS** will be in the upper display and **FC** will be in the lower display.

**Step 30:** Use the **up or down** keys to move to the Lockout submenu. **LoC** will be in the upper display and **FC** will be in the lower display. Press the **advance key** to enter the Lockout submenu.

	<u>Parameter</u>	<u>Value</u>	<u>Description</u>
30-1	<b>LoC.o</b> <b>Advance key</b>	2	Lock Operations Page
30-2	<b>rLoC</b> <b>Advance key</b>	1	Read Lockout Security
30-3	<b>SLoC</b> <b>Advance key</b>	1	Set Lockout Security

**Step 31:** Pressing the **advance key** at parameter **SLoC** will advance you to back to parameter **LoC.o**. Press the **infinity key** to return you to the Lockout submenu.

**Step 32:** Press the **infinity key** again to return you to the Home page.

**Congratulations! Programming is Complete.**



# HYDRAULIC OIL MSDS

---

# MATERIAL SAFETY DATA SHEET

<b>SECTION 1</b>	<b>PRODUCT AND COMPANY IDENTIFICATION</b>
------------------	---

## PRODUCT

**Product Name:** UNIVIS N 32  
**Product Description:** Base Oil and Additives  
**Product Code:** 8259  
**Intended Use:** Hydraulic fluid

## COMPANY IDENTIFICATION

**Supplier:** Canada Imperial Oil Limited, An Affiliate of Exxon Mobil Corporation  
P.O. Box 4029, Station A  
Calgary, ALBERTA. T2P 3M9 Canada

**24 Hour Health Emergency** 519-339-2145  
**Transportation Emergency Phone** 519-339-2145  
**Supplier General Contact** 1-800-567-3776

<b>SECTION 2</b>	<b>COMPOSITION / INFORMATION ON INGREDIENTS</b>
------------------	---

## Reportable Hazardous Substance(s) or Complex Substance(s)

Name	CAS#	Concentration*
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	64742-53-6	20 - 30%

\* All concentrations are percent by weight unless material is a gas. Gas concentrations are in percent by volume.

<b>SECTION 3</b>	<b>HAZARDS IDENTIFICATION</b>
------------------	-------------------------------

This material is not considered to be hazardous according to regulatory guidelines (see (M)SDS Section 15).

## POTENTIAL HEALTH EFFECTS

Low order of toxicity. Excessive exposure may result in eye, skin, or respiratory irritation. High-pressure injection under skin may cause serious damage.

**NFPA Hazard ID:** Health: 0 Flammability: 1 Reactivity: 0  
**HMIS Hazard ID:** Health: 0 Flammability: 1 Reactivity: 0

**NOTE:** This material should not be used for any other purpose than the intended use in Section 1 without expert advice. Health studies have shown that chemical exposure may cause potential human health risks which may vary from person to person.

<b>SECTION 4</b>	<b>FIRST AID MEASURES</b>
------------------	---------------------------

**INHALATION**

Remove from further exposure. For those providing assistance, avoid exposure to yourself or others. Use adequate respiratory protection. If respiratory irritation, dizziness, nausea, or unconsciousness occurs, seek immediate medical assistance. If breathing has stopped, assist ventilation with a mechanical device or use mouth-to-mouth resuscitation.

**SKIN CONTACT**

Wash contact areas with soap and water. If product is injected into or under the skin, or into any part of the body, regardless of the appearance of the wound or its size, the individual should be evaluated immediately by a physician as a surgical emergency. Even though initial symptoms from high pressure injection may be minimal or absent, early surgical treatment within the first few hours may significantly reduce the ultimate extent of injury.

**EYE CONTACT**

Flush thoroughly with water. If irritation occurs, get medical assistance.

**INGESTION**

First aid is normally not required. Seek medical attention if discomfort occurs.

<b>SECTION 5</b>	<b>FIRE FIGHTING MEASURES</b>
------------------	-------------------------------

**EXTINGUISHING MEDIA**

**Appropriate Extinguishing Media:** Use water fog, foam, dry chemical or carbon dioxide (CO<sub>2</sub>) to extinguish flames.

**Inappropriate Extinguishing Media:** Straight Streams of Water

**FIRE FIGHTING**

**Fire Fighting Instructions:** Evacuate area. Prevent runoff from fire control or dilution from entering streams, sewers, or drinking water supply. Firefighters should use standard protective equipment and in enclosed spaces, self-contained breathing apparatus (SCBA). Use water spray to cool fire exposed surfaces and to protect personnel.

**Unusual Fire Hazards:** Pressurized mists may form a flammable mixture.

**Hazardous Combustion Products:** Smoke, Fume, Sulfur oxides, Aldehydes, Oxides of carbon, Incomplete combustion products

**FLAMMABILITY PROPERTIES**

**Flash Point [Method]:** 165C (329F) [ASTM D-93]

**Flammable Limits (Approximate volume % in air):** LEL: 0.9 UEL: 7.0

**Auto ignition Temperature:** N/D

<b>SECTION 6</b>	<b>ACCIDENTAL RELEASE MEASURES</b>
------------------	------------------------------------

### NOTIFICATION PROCEDURES

In the event of a spill or accidental release, notify relevant authorities in accordance with all applicable regulations. U.S. regulations require reporting releases of this material to the environment which exceed the reportable quantity or oil spills which could reach any waterway including intermittent dry creeks. The National Response Center can be reached at (800)424-8802.

### SPILL MANAGEMENT

**Land Spill:** Stop leak if you can do it without risk. Recover by pumping or with suitable absorbent.

**Water Spill:** Stop leak if you can do it without risk. Confine the spill immediately with booms. Warn other shipping. Remove from the surface by skimming or with suitable absorbents. Seek the advice of a specialist before using dispersants.

Water spill and land spill recommendations are based on the most likely spill scenario for this material; however, geographic conditions, wind, temperature, (and in the case of a water spill) wave and current direction and speed may greatly influence the appropriate action to be taken. For this reason, local experts should be consulted. Note: Local regulations may prescribe or limit action to be taken.

### ENVIRONMENTAL PRECAUTIONS

**Large Spills:** Dike far ahead of liquid spill for later recovery and disposal. Prevent entry into waterways, sewers, basements or confined areas.

<b>SECTION 7</b>	<b>HANDLING AND STORAGE</b>
------------------	-----------------------------

### HANDLING

Prevent small spills and leakage to avoid slip hazard.

**Static Accumulator:** This material is a static accumulator.

### STORAGE

Do not store in open or unlabelled containers.

<b>SECTION 8</b>	<b>EXPOSURE CONTROLS / PERSONAL PROTECTION</b>
------------------	--

**Exposure limits/standards for materials that can be formed when handling this product:** When mists / aerosols can occur, the following are recommended: 5 mg/m<sup>3</sup> - ACGIH TLV, 10 mg/m<sup>3</sup> - ACGIH STEL, 5 mg/m<sup>3</sup> - OSHA PEL.

NOTE: Limits/standards shown for guidance only. Follow applicable regulations.

### ENGINEERING CONTROLS

The level of protection and types of controls necessary will vary depending upon potential exposure conditions. Control measures to consider:

No special requirements under ordinary conditions of use and with adequate ventilation.

## PERSONAL PROTECTION

Personal protective equipment selections vary based on potential exposure conditions such as applications, handling practices, concentration and ventilation. Information on the selection of protective equipment for use with this material, as provided below, is based upon intended, normal usage.

**Respiratory Protection:** If engineering controls do not maintain airborne contaminant concentrations at a level which is adequate to protect worker health, an approved respirator may be appropriate. Respirator selection, use, and maintenance must be in accordance with regulatory requirements, if applicable. Types of respirators to be considered for this material include:

No special requirements under ordinary conditions of use and with adequate ventilation.

For high airborne concentrations, use an approved supplied-air respirator, operated in positive pressure mode. Supplied air respirators with an escape bottle may be appropriate when oxygen levels are inadequate, gas/vapor warning properties are poor, or if air purifying filter capacity/rating may be exceeded.

**Hand Protection:** Any specific glove information provided is based on published literature and glove manufacturer data. Work conditions can greatly effect glove durability; inspect and replace worn or damaged gloves. The types of gloves to be considered for this material include:

No protection is ordinarily required under normal conditions of use.

**Eye Protection:** If contact is likely, safety glasses with side shields are recommended.

**Skin and Body Protection:** Any specific clothing information provided is based on published literature or manufacturer data. The types of clothing to be considered for this material include:

No skin protection is ordinarily required under normal conditions of use. In accordance with good industrial hygiene practices, precautions should be taken to avoid skin contact.

**Specific Hygiene Measures:** Always observe good personal hygiene measures, such as washing after handling the material and before eating, drinking, and/or smoking. Routinely wash work clothing and protective equipment to remove contaminants. Discard contaminated clothing and footwear that cannot be cleaned. Practice good housekeeping.

## ENVIRONMENTAL CONTROLS

See Sections 6, 7, 12, 13.

**SECTION 9****PHYSICAL AND CHEMICAL PROPERTIES**

Typical physical and chemical properties are given below. Consult the Supplier in Section 1 for additional data.

**GENERAL INFORMATION**

**Physical State:** Liquid

**Color:** Yellow

**Odor:** Characteristic

**Odor Threshold:** N/D

**IMPORTANT HEALTH, SAFETY, AND ENVIRONMENTAL INFORMATION**

**Relative Density (at 15 C):** 0.87

**Flash Point [Method]:** 165C (329F) [ ASTM D-93]

**Flammable Limits (Approximate volume % in air):** LEL: 0.9 UEL: 7.0

**Auto ignition Temperature:** N/D

**Boiling Point / Range:** 229C (444F) - 512C (954F)

**Vapor Density (Air = 1):** N/D

**Vapor Pressure:** [N/D at 40 °C ] | < 1 kPa (7.5 mm Hg) at 38C

**Evaporation Rate (n-butyl acetate = 1):** < 0.1

**pH:** N/A

**Log Pow (n-Octanol/Water Partition Coefficient):** > 3.5

**Solubility in Water:** Negligible

**Viscosity:** 32 cSt (32 mm<sup>2</sup>/sec ) at 40 C

**Oxidizing Properties:** See Sections 3, 15, 16.

**OTHER INFORMATION**

**Freezing Point:** N/D

**Melting Point:** N/A

**Pour Point:** -48°C (-54°F)

**DMSO Extract (mineral oil only), IP-346:** < 3 %wt

**SECTION 10****STABILITY AND REACTIVITY**

**STABILITY:** Material is stable under normal conditions.

**CONDITIONS TO AVOID:** Excessive heat. High energy sources of ignition.

**MATERIALS TO AVOID:** Strong oxidizers

**HAZARDOUS DECOMPOSITION PRODUCTS:** Material does not decompose at ambient temperatures.

**HAZARDOUS POLYMERIZATION:** Will not occur.



## ACUTE TOXICITY

<u>Route of Exposure</u>	<u>Conclusion / Remarks</u>
<b>Inhalation</b>	
Toxicity (Rat): LC50 > 5000 mg/m <sup>3</sup>	Minimally Toxic. Based on assessment of the components.
Irritation: No end point data.	Negligible hazard at ambient/normal handling temperatures. Based on assessment of the components.
<b>Ingestion</b>	
Toxicity (Rat): LD50 > 2000 mg/kg	Minimally Toxic. Based on test data for structurally similar materials.
<b>Skin</b>	
Toxicity (Rabbit): LD50 > 2000 mg/kg	Minimally Toxic. Based on test data for structurally similar materials.
Irritation (Rabbit): Data available.	Negligible irritation to skin at ambient temperatures. Based on assessment of the components.
<b>Eye</b>	
Irritation (Rabbit): Data available.	May cause mild, short-lasting discomfort to eyes. Based on assessment of the components.

## CHRONIC/OTHER EFFECTS

**Contains:**

Base oil severely refined: Not carcinogenic in animal studies. Representative material passes IP-346, Modified Ames test, and/or other screening tests. Dermal and inhalation studies showed minimal effects; lung non-specific infiltration of immune cells, oil deposition and minimal granuloma formation. Not sensitizing in test animals.

Additional information is available by request.

The following ingredients are cited on the lists below: None.

## --REGULATORY LISTS SEARCHED--

1 = NTP CARC

3 = IARC 1

5 = IARC 2B

2 = NTP SUS

4 = IARC 2A

6 = OSHA CARC

**SECTION 12****ECOLOGICAL INFORMATION**

The information given is based on data available for the material, the components of the material, and similar materials.

**ECOTOXICITY**

Material -- Not expected to be harmful to aquatic organisms.

**MOBILITY**

Base oil component -- Low solubility and floats and is expected to migrate from water to the land. Expected to partition to sediment and wastewater solids.

**PERSISTENCE AND DEGRADABILITY****Biodegradation:**

Base oil component -- Expected to be inherently biodegradable

**BIOACCUMULATION POTENTIAL**

Base oil component -- Has the potential to bioaccumulate, however metabolism or physical properties may reduce the bioconcentration or limit bioavailability.

**SECTION 13****DISPOSAL CONSIDERATIONS**

Disposal recommendations based on material as supplied. Disposal must be in accordance with current applicable laws and regulations, and material characteristics at time of disposal.

**DISPOSAL RECOMMENDATIONS**

Product is suitable for burning in an enclosed controlled burner for fuel value or disposal by supervised incineration at very high temperatures to prevent formation of undesirable combustion products.

**REGULATORY DISPOSAL INFORMATION**

RCRA Information: The unused product, in our opinion, is not specifically listed by the EPA as a hazardous waste (40 CFR, Part 261D), nor is it formulated to contain materials which are listed as hazardous wastes. It does not exhibit the hazardous characteristics of ignitability, corrosibility or reactivity and is not formulated with contaminants as determined by the Toxicity Characteristic Leaching Procedure (TCLP). However, used product may be regulated.

**Empty Container Warning** PRECAUTIONARY LABEL TEXT: Empty containers may retain residue and can be dangerous. DO NOT PRESSURIZE, CUT, WELD, BRAZE, SOLDER, DRILL, GRIND OR EXPOSE SUCH CONTAINERS TO HEAT, FLAME, SPARKS, STATIC ELECTRICITY, OR OTHER SOURCES OF IGNITION; THEY MAY EXPLODE AND CAUSE INJURY OR DEATH. Do not attempt to refill or clean container since residue is difficult to remove. Empty drums should be completely drained, properly bunged and promptly returned to a drum re-conditioner. All containers should be disposed of in an environmentally safe manner and in accordance with governmental regulations.

**SECTION 14****TRANSPORT INFORMATION**

**LAND (DOT) :** Not Regulated for Land Transport

**LAND (TDG) :** Not Regulated for Land Transport

**SEA (IMDG) :** Not Regulated for Sea Transport according to IMDG-Code

**AIR (IATA) :** Not Regulated for Air Transport

**SECTION 15****REGULATORY INFORMATION**

**OSHA HAZARD COMMUNICATION STANDARD:** When used for its intended purposes, this material is not classified as hazardous in accordance with OSHA 29 CFR 1910.1200.

**NATIONAL CHEMICAL INVENTORY LISTING:** DSL, TSCA

**EPCRA:** This material contains no extremely hazardous substances.

**SARA (311/312) REPORTABLE HAZARD CATEGORIES:** Delayed Health.

**SARA (313) TOXIC RELEASE INVENTORY:** This material contains no chemicals subject to the supplier notification requirements of the SARA 313 Toxic Release Program.

**The Following Ingredients are Cited on the Lists Below:\***

Chemical Name	CAS Number	List Citations
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	64742-53-6	13, 17, 18
PHOSPHORODITHOIC ACID, O,O-DI C1-14-ALKYL ESTERS, ZINC SALTS (2:1) (ZDDP)	68649-42-3	15

--REGULATORY LISTS SEARCHED--

1 = ACGIH ALL	6 = TSCA 5a2	11 = CA P65 REPRO	16 = MN RTK
2 = ACGIH A1	7 = TSCA 5e	12 = CA RTK	17 = NJ RTK
3 = ACGIH A2	8 = TSCA 6	13 = IL RTK	18 = PA RTK
4 = OSHA Z	9 = TSCA 12b	14 = LA RTK	19 = RI RTK
5 = TSCA 4	10 = CA P65 CARC	15 = MI 293	

Code key: CARC=Carcinogen; REPRO=Reproductive

\* EPA recently added new chemical substances to its TSCA Section 4 test rules. Please contact the supplier to confirm whether the ingredients in this product currently appear on a TSCA 4 or TSCA 12b list.

N/D = Not determined, N/A = Not applicable

**THIS SAFETY DATA SHEET CONTAINS THE FOLLOWING REVISIONS:**

No revision information is available.

-----  
-----  
-----

The information and recommendations contained herein are, to the best of Exxon Mobil's knowledge and belief, accurate and reliable as of the date issued. You can contact Exxon Mobil to insure that this document is the most current available from Exxon Mobil. The information and recommendations are offered for the user's consideration and examination. It is the user's responsibility to satisfy itself that the product is suitable for the intended use. If buyer repackages this product, it is the user's responsibility to insure proper health, safety and other necessary information is included with and/or on the container. Appropriate warnings and safe-handling procedures should be provided to handlers and users. Alteration of this document is strictly prohibited. Except to the extent required by law, re-publication or retransmission of this document, in whole or in part, is not permitted. The term, "Exxon Mobil" is used for convenience, and may include any one or more of Exxon Mobil Chemical Company, Exxon Mobil Corporation, or any affiliates in which they directly or indirectly hold any interest.

-----  
-----

Internal Use Only

MHC: 0, 0, 0, 0, 0, 0

PPEC: A

DGN: 5007202 (1012936)

-----  
-----

Copyright 2002 Exxon Mobil Corporation, All rights reserved

# TIRE INFORMATION

---

# **1. Tire Safety Information**

This portion of the user's manual contain tire safety information as required by 49 CFR 575.6.

Section 2.0 contains “Steps for determining correct load limit-trailer”

Section 2.2 contains “ Steps for determining correct load limit-tow vehicle”

Section 2.3 contains a Glossary of Tire Terminology, including “cold” inflation pressure,” “ maximum inflation pressure” , recommended inflation pressure”, and other non-technical terms.

Section 2.4 contains information from NHTSA brochure entitled “ Tire Safety-Everything Rides On It”. This brochure as well as the preceding subsections, describes the following items:

- Tire labeling, including a description and explanation of each marking on the tires, and information about the DOT Tire Identification Number (TIN)
- Recommended tire inflation pressure, including description and explanation of :
  - A. Cold Inflation Pressure
  - B. Vehicle Placard and location of vehicle
  - C. Adverse safety consequences of under inflation (including tire failure)
  - D. Measuring and adjusting air pressure for proper inflation
- Tire Care, including maintenance and safety practices
- Vehicle load limits, including a description and explanation of the following items:
  - A. Locating and understanding the load limit information, total load capacity, and cargo capacity
  - B. Calculating total and cargo capacities with varying seating configurations including Quantitative Examples showing/ illustrating how the vehicles cargo and luggage capacity decreases as combined number and size of occupant increases. This item is also discussed in section 3
  - C. Determining compatibility of tire and vehicle load capabilities
  - D. Adverse Safety consequences of overloading on handling and stopping tires

## **1.1 Steps for Determining Correct Load Limit-Trailer**

Determining the load limits of a trailer includes more than understanding the load limits of the tires alone. On all trailers there is a Federal Certification/ VIN label that is located on the forward half of the left (road) side of the unit. This certification/ VIN label will indicate the trailer's Gross Vehicle Weight Rating (GBWR). This is the most particular axle can weigh. If there are multiple axles, the GAWR of each axle will be provided.


If your trailer has a GVWR of 10,000 pounds or less, there is a vehicle placard located in the same location as the Certification label described above. This placard provides tire and loading information. In addition, this placard will show a statement regarding maximum cargo capacity. Cargo can be added to the trailer, up to the maximum weigh specified on the placard. The combined weigh of the cargo is provided as a single number. In any case, remember: the total weight of a fully loaded trailer can not exceed the stated GVWR.

For trailers with living quarters installed, the weight of water and propane also need to be considered. The weight of fully filled propane containers is considered part of the weight of the trailer before it is loaded with cargo, and is not considered part of the disposable cargo load. Water however, is a disposable cargo weight about 800 pounds. If more cargo is being transported, water can be off-loaded to keep the total amount of cargo added to the vehicle with the limits of the GVWR so as not to overload the vehicle. Understanding this flexibility will allow you, the owner, to make choices that fit your travel needs.

When loading your cargo, be sure it is distributed evenly to prevent overloading front to back and side to side. Heavy items should be placed low and as close to the axle positions as reasonable. Too many items on one side may overload a tire. The best way to know the actual weigh of the vehicle is to weigh it at a public scale. Talk to our dealer to discuss the weighing methods needed toe capture the various weights related to the trailer. This would include the weight empty or unloaded, weights per axle, wheel, hitch or king-pin, and total weight.

Excessive loads and/or under inflation cause tire overloading and, as a result abnormal tire flexing occurs. This situation can generate an excessive amount of heat within the tire. Excessive heat may lead to tire failure. It is the air pressure that enables a tire to support the load., so proper inflation is critical. The proper air pressure may be found on the

### **1.1.1 Trailers 10,000 Pounds GVWR or Less**

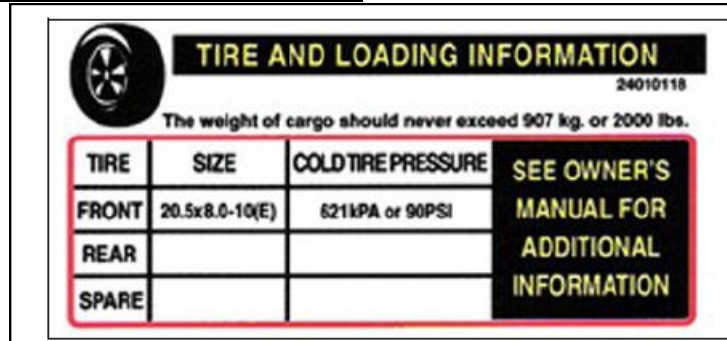

Tire and Loading Information Placard-Figure 1

1. Locate the statement, “The weight of cargo should never exceed XXX kg or XXX lbs.” on your vehicle’s placard. See figure1-1
2. This figure equals the available amount of cargo and luggage load capacity
3. Determine the combined weight of luggage and cargo being loaded on the vehicle. The weight may not safely exceed the available cargo and luggage load capacity.

The trailer’s placard refers to the tire information placard attached adjacent to or near the trailer’s VIN (certification) label at the left front of the trailer.

### **1.1.2. Trailers Over 10,000 LBS. GVWR (Note: These are not required to have a tire information placard on the vehicle)**

1. Determine the empty weight of your trailer by weighting the trailer using a public scale or other means.
  - This step does not have to be repeated
2. Locate the GVWR (Gross Vehicle Weight Rating) of the trailer on your trailer’s VIN (certification) label.
3. Subtract the empty weight of your trailer from the GVWR stated on the VIN label. That weight is the maximum available cargo capacity of the trailer and may not be safely exceeded.

### **1.2. Steps for Determining Correct Load Limit-Tow Vehicle**

1. Locate the statement, “ The combined weight of occupant and cargo should never exceed XXX LBS., ‘ on your vehicle’s placard
2. Determine the combined weight of the driver and passengers from who will be riding in your vehicle.
3. Subtract the combined weight of the driver and passengers from XXX Kilograms or XXX LBS.
4. The resulting figure equals the available amount of cargo and luggage capacity. For example. If the “XXX” amount equals 1400 LBS. and there are five 150 LB. passengers in your vehicle, the amount of available cargo and luggage capacity is 650 LBS. (1400-750 (5X150) = 650 LBS. )
5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage capacity calculated in step #4
6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult the tow vehicle’s manual to determine how this weight transfer reduces the available cargo and luggage capacity of your Vehicle.

### **1.3 Glossary Of Tire Terminology**

#### **Accessory Weight**

The combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats radio and heater, to extent that these items are available as factory-installed equipment (whether installed or not)

#### **Bead**

The part of the tire is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim

#### **Blas ply tire**

A pneumatic tire in which ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread

#### **Carcass**

The tire structure, except tread and sidewall rubber which, when inflated, bears the load

#### **Chunking**

The breaking away of pieces of the tread or sidewall

#### **Cold Inflation Pressure**

The pressure in the tire before you drive

#### **Cord**

The strands forming the piles in the tire

#### **Cord Separation**

The parting of cords from adjacent rubber compounds

#### **Cracking**

Any parting within the tread, sidewall, or inner liner of the tire extending to cord material

#### **CT**

A pneumatic tire with an inverted flange tire and rim system in which the rim is designed with rim flanges pointed radially inward and the tire is designed to fit on the underside of the rim in a manner that encloses the rim flanges inside the air cavity of the tire

#### **Curb Weight**

The weight of a motor vehicle with standard equipment including the maximum capacity of fuel, oil, and coolant, and, if so equipped, air conditioning and additional weight optional engine

#### **Extra Load Tire**

A tire designed to operate a higher loads and at higher inflation pressures than the corresponding standard tire

#### **Groove**

The space between two adjacent tread ribs

#### **Gross Axle Weight Rating**

The maximum weight that any axle can support, as published on the certification/VIN label on front left side of the trailer. Actual weight determined by weighing each axle on public scale, with the trailer attached to the towing vehicle



**Hitch Weight**

The downward force exerted on the hitch ball by the trailer coupler

**Interliner**

The layer (s) forming the inside surface of a tubeless tire that contains the inflating medium within the tire

**Innerliner Separation**

The parting of the innerliner from cord material in the carcass

**Intended Outboard Sidewall**

The sidewall that contains a white-wall, bears white lettering or bears manufacturer, brand, and/or model name molding that is higher or deeper than the same molding on the other sidewall of the tire or the outward facing sidewall of an asymmetrical tire that has a particular side that must always face outward when mounted on a vehicle.

**Light Truck (LT) Tire**

A tire designated by its manufacturer as primarily intended for use on lightweight trucks or multipurpose passenger vehicles.

**Load Rating**

The maximum load that a tire is rated to carry for a given inflation pressure

**Maximum Load Rating**

The load rating for a tire at the maximum permissible inflation pressure for that tire

**Maximum Loaded Vehicle Weight**

The sum curb weight, accessory weight, vehicle capacity weight, and production options weight

**Measuring Rim**

The rim on which a tire is fitted for physical dimension requirements

**Pin Weight**

The downward force applied to the 5th wheel or gooseneck ball, by the trailer kingpin or gooseneck coupler

**Non-Pneumatic Rim**

A mechanical device which, when a non-pneumatic tire assembly incorporates a wheel, supports the tire, and attaches, either integrally or separably, to the wheel center member and upon which the tire is attached

**Non-Pneumatic Spare Tire Assembly**

A non-pneumatic tire assembly intended for temporary use in place of one of the pneumatic tires and rims that are fitted to a passenger car in compliance with requirement of this standard

**Non-Pneumatic Tire**

A mechanical device which transmits, either directly or through a wheel or wheel center member, the vertical load and tractive forces from roadway to the vehicle, generates the tractive forces that provide that directional control of the vehicle and does not rely on the containment of any gas or fluid or providing those functions

**Non-Pneumatic Tire Assembly**

A non-pneumatic tire, alone or in combination with a wheel or wheel center member, which can be mounted on a vehicle

**Normal Occupant Weight**

This means 68 kilograms (150 lbs. ) time the number of occupants specified in the second column of Table 1 of 49 CFR 571.110.

**Occupant Distribution**

The distribution of occupants in a vehicle as specified in the third column of Table 1 of 49 CFR 571.110.

**Open Splice**

Any parting of any junction of tread, sidewall, or innerliner that extends to cord material

**Outer Diameter**

The overall diameter of an inflated new tire

**Overall Width**

The linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs

**Ply**

A layer of rubber-coated parallel cords

**Ply Separation**

A parting of rubber compound between adjacent plies

**Pneumatic Tire**

A mechanical device made of rubber, chemicals, fabric and steel or other materials, that when mounted on an automotive wheel, provides the traction and contains the gas or fluid that sustains the load.

**Production Options Weight**

The combined weight of those installed regular production options weighing over 2.3 Kilograms (5lbs.) in excess of those standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim.

**Radial Ply Tire**

A pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread

**Recommended Inflation Pressure**

This is the inflation pressure provided by the vehicle manufacture on the Tire Information Label and on the Certification/VIN tag.

**Reinforced Tire**

A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire.

**Rim**

A metal support for a tire or a tire and tube assembly upon which the tire beads are seated

**Rim Diameter**

This means the rim diameter and width

**Rim Type Designation**

This means the industry of manufacturer's designation for a rim by style or code

**Rim Width**

This means the normal distance between rim flanges

**Section Width**

The linear distance between the exteriors of the sidewalls of an inflated tire, excluding elevations due to labeling, decoration, or protective bands.

**Sidewall**

That portion of a tire between the tread and bead

**Sidewall Separation**

The parting of the rubber compound from the cord material in the sidewall

**Special Trailer (ST) Tire**

The "ST" is an indication the tire is for trailer use only

**Test Rim**

The rim on which a tire is fitted for testing and may be an rim listed as appropriate for use with that tire

**Tread**

That portion of a tire that comes into contact with the road

**Tread Rib**

A tread section running circumferentially around a tire

**Treadwear Indicators (TWI)**

The projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread

**Vehicle Capacity Weight**

The rated cargo and luggage load plus 68 kilograms (150 lbs.) times the vehicle's designated seating capacity

**Vehicle Maximum load On The Tire**

The load on an individual tire that is determined by distributing to each axle its share of the curb weight, accessory weight, and normal occupant weight (distributed in accordance with Table 1 of CRF 49 571.110) and dividing by 2

**Weather Side**

The surface area of the rim not covered by the inflated tire

**Wheel Center Member**

In the case of a non-pneumatic tire assembly incorporating a wheel, a mechanical device which attaches, Either integrally or separately, to the non-pneumatic tire assembly not incorporating a wheel, a mechanical device which attaches, either integrally or separately, to the non-pneumatic tire and provides the connection between tire and the vehicle

**Wheel Holding Fixture**

The fixture used to hold the wheel and tire assembly securely during testing

## **1.4. Tire Safety-Everything Rides On It**

The national Traffic Safety Administration (NHTSA) has published a brochure (DOT HS 809 361) that discusses all aspects of Tire Safety, as required by CFR 575.6 This brochure is reproduced in part below. It can be obtained and downloaded from NHTSA, free of charge, from the following website:

<http://www.nhtsa.dot.gov/cars/rules/TireSafety/ridesonit/tireindex/html>

Studies of tire safety show that maintain proper tire pressure, observing tire and vehicle load limits (not carrying more weight in your vehicle than your tires or vehicle can safely handle), avoiding road hazards, and inspecting tires for cuts, slashes, and other irregularities are most important things you can do to avoid tire failure, such as tread separation or blowout and flat tires. These actions, along with other care and maintenance activities, can also:

- Improve vehicle handling
- Help protect you and others from avoidable breakdowns and accidents
- Improve fuel economy
- Increase the life of your tires

This booklet presents a comprehensive overview of tire safety, including information on the following topics:

- Basic tire maintenance
- Uniform Tire Quality Grading System
- Fundamental characteristics of tires
- Tire safety tips

Use this information to make tire safety a regular part of your vehicle maintenance routine. Recognize that the time you spend is minimal compared with inconvenience and safety consequences of a flat tire or other tire failure.

## **1.5. Safety First-Basic Tire Maintenance**

Properly maintained tires improve the steering, stopping, traction and load-carrying capability of your vehicle underinflated tires and over loaded vehicles are a major cause of tire failure. Therefore as mentioned above, to avoid flat tires and other types of tire failure, you should maintain proper tire pressure, observe tire and vehicle load limits, avoid road hazards, and regularly inspect your tires.

### 1.5.1 Finding your vehicle's recommended tire pressure and load limits

Tire information placards and vehicle certification labels contain information on tires and load limits. These limits indicate the vehicle manufacturer's information including:

- Recommended tire size
- Recommended tire inflation pressure
- Vehicle capacity weight (VCW-the maximum occupant and cargo weight a vehicle is designed to carry)
- Front and rear gross axle weight ratings (GAWR-the maximum weight the axle systems are designed to carry)

Both placards and certification labels are permanently attached to the trailer near the left front

## **1.5.2. Understanding Tire Pressure and Load Limits**

Tire inflation pressure is the level of air in the tire that provides it with load-carrying capacity and affects the overall performance of the vehicle. The tire inflation pressure is a number that indicates the amount of air Pressure-measured in pounds per square inch (psi) -a tire requires to be properly inflated. (you will also find this number on the vehicle information placard expressed in kilopascals (kpa), which is the metric measure used internationally)

Manufacturers of passenger vehicles and light truck determined this number based on the vehicle's design load limit, that is , the greatest amount of weight a vehicle can safely carry and the vehicles tire size. The proper tire pressure for your vehicle is referred to as the “ recommended cold inflation pressure” (As you will read below, it is difficult to obtain the recommended tire pressure if your tires are not cold) because tires are designed to be used on more than one type of vehicle, tire manufactures list the “maximum” permissible inflation pressure” on the tire sidewall. This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.

## **1.5.3. Checking Tire Pressure**

It is important to check your vehicle's tire pressure at least once a month for the following reasons:

- Most tire may naturally lose air over time
- Tire can lose air suddenly if you drive over pothole or other object or if you strike the curb when parking.
- With radial tires, it is usually not possible to determine underinflation by visual inspection

For convenience, purchases a tire pressure gauge to keep in your vehicle. Gauges can be purchased at tire dealerships, auto supply stores, and other retail outlets.

The recommended tire inflation pressure that vehicle manufacturers provide reflects the proper psi when a tire is cold. The term cold does not relate to the outside temperature. Rather, a cold tire is one that has not been driven on for at least three hours. When you drive, your tires get warmer, causing the air pressure within them to increase. Therefore, to get an accurate tire pressure reading, you must measure tire pressure when the tires are cold or compensate for extra pressure in warm tires.

## **1.5.4. Steps For Maintaining Proper Tire Pressure**

- **Step 1:** Locate the recommended tire pressure on the vehicle's tire information placard, certification label, or the owner's manual.
- **Step 2:** Record the tire pressure of all tires
- **Step 3:** If the tire pressure is too high in any of the tires, slowly release air by gently pressing on the tire valve stem with the edge of your tire gauge until you get to the correct pressure
- **Step 4:** If the tire pressure is too low, note the difference between the measured and the correct tire pressure. These “missing” pounds of pressure are what you will need to add
- **Step 5:** At a service station, add the missing pounds of air pressure (except in cases in which the front and rear tires are supposed to have different amounts of pressure)

If you have been driving your vehicle and think that a tire is underinflated, fill it to the recommended cold inflation pressure indicated on your vehicle's tire information placard or certification label. While your tire may still be slightly underinflated due to the extra pounds of pressure in the warm tire, it is safer to drive air pressure that is slightly lower than the vehicle manufacturer's recommended cold inflation pressure than to drive with a significantly underinflated tire. Since this is a temporary fix, don't forget to recheck and adjust the tire's pressure when you can obtain a cold reading.

### **1.5.5. Tire Size**

To maintain tire safety, purchase new tires that are the same size as the vehicle's original tires or another size recommended by the manufacturer. Look at the tire information placard, the owner's manual, or the sidewall of the tire you are replacing to find this information. If you have any doubt about the correct size to choose, consult with the tire dealer.

### **1.5.6. Tire Tread**

The tire tread provides the gripping action and action traction that prevent your vehicle from slipping or sliding, especially when the road is wet or icy. In general, tires are not safe and should be replaced when the tread is worn down to 1/16 of an inch. Tire have built-in tread wear indicators that let you know when it is time to replace your tires. These indicators are raised sections spaced intermittently in the bottom of the tread grooves. When they appear "even" with the outside of the tread with Lincoln's head upside down and facing you. If you can see the top of Lincoln's head, you are ready for new tires.

### **1.5.7. Tire Balance and Wheel Alignment**

To avoid vibration or shaking of the vehicle when a tire rotates, the tire must be properly balanced. This balance is achieved by positioning weights on the wheel to counterbalance heavy spots on the wheel-and-tire assembly. A wheel alignment adjusts the angles of the wheels so that they are positioned correctly relative to the vehicle's frame. This adjustment maximizes the life of your tires. These adjustments require special equipment and should be performed by a qualified technician.

### **1.5.8. Tire Repair**


The proper repair of a punctured tire requires a plug for the hole and a patch for the area inside the tire that surrounds the puncture hole. Punctures through the tread can be repaired if they are not too large, but punctures to the sidewall should be repaired. Tires must be removed from the rim to be properly inspected before being plugged and patched.

### **1.5.9. Tire Fundamentals**

Federal Law requires tire manufactures to place standardized information on the sidewall of all tires. This information identifies and describes the fundamental characteristics of the tire and also provides a tire identification number for safety standard certification and in case of a recall.

## 1.5.9.1. Information on Passenger Vehicle Tires

Please Refer to the Diagram Below

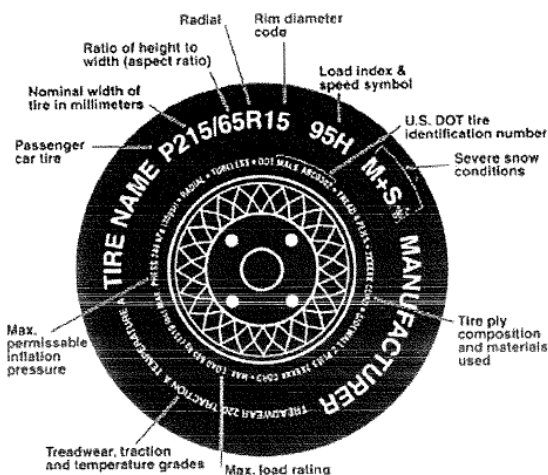

### **P**

The “P” indicates the tire is for passenger vehicles

### **Next Number**

This three-digit number gives the width in millimeters of the tire from sidewall edge to sidewall edge. In general, the larger the number, the wider the tire.

### **Next Number**

This two digit number, known as the aspect ratio, gives the tire’s ration of height to width. Numbers of 70 or lower indicate a short sidewall for improved steering response and better overall handling on dry pavement.

### **R**

The “R” stands for radial. Radial ply construction of tires has been the industry standard for the past 20 years

### **Next Number**

This two-digit number is the wheel or rim diameter in inches. If you change your wheel size, you will have to purchase new tires to match the new wheel diameter.

### **Next Number**

This two-or three digit number is the tire’s load index. It is a measurement of how much weight each tire can support. You may find this information in your owner’s manual.

### **M + S**

The “M + S” or “M/S” indicates that the tire has some mud and snow capability. Most radial tires have these markings; hence they have some mud and snow capability.

### **Speed Rating**

The speed rating denotes the speed at which a tire is designed to be driven for extended periods of time. The ratings range from 99 miles per hour (mph) to 186 mph. These ratings are listed below. Note: You many not find this information on all tires because it not required by law.

## Tire Safety Information

Letter Rating	Speed Rating
Q	99 Mph
R	106 Mph
S	112 Mph
T	118 Mph
U	124 Mph
H	130 Mph
V	149 Mph
W	168* Mph
Y	186* Mph

\* For tires with a maximum speed capability over 149 mph, tire manufacturers sometimes use the letters ZR. For those with a maximum speed capability over 186 mph, tire manufacturers always use the letters ZR

### **U.S. DOT Tire Identification Number**

This begins with the letters “DOT” and indicates that the tire meets all federal standards. The next two numbers or letters are the plant code where it was manufactured, and the last four numbers represent the week and year the tire was built. For example, the numbers 3197 means the 31st week of 1997. The other numbers are marketing codes used at the manufacturer’s discretion. This information is used to contact consumers if a tire defect requires a recall.

### **Tire Ply Composition and Materials Used**

The number of plies indicates the number of layers of rubber-coated fabric in tire. In general, the greater the number plies, the more weight a tire can support. Tire manufacturers also must indicate the materials in the tire, which include steel, nylon, polyester, and others

### **Maximum Load Rating**

This number indicates the maximum load in kilograms and pounds that can be carried by the tire

### **Maximum Permissible Inflation Pressure**

This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions

## **1.5.9.2. UTQGS Information**

### **Treadwear Number**

This letter indicates the tire’s wear rate. The higher the treadwear number is, the longer it should take for tread wear down. For example, a tire graded 400 should last twice as long as a tire graded 200.

### **Traction Letter**

This letter indicates a tire’s ability to stop on wet pavement. A higher graded tire should allow you to stop your car on wet roads in a shorter distance than a tire with lower grade. Traction is graded from highest to lowest as “AA”, “A”, “B”, and “C”.


### **Temperature Letter**

This letter indicates a tire’s resistance to heat. The temperature grade is for a tire that is inflated properly and not overloaded. Excessive speed, underinflation or excessive loading, either separately or in combination, can cause heat build-up and possible tire failure. From highest to lowest, a tire’s resistance to heat is graded as “A”, “B”, or “C”



### 1.5.9.3. Additional Information on Light Truck Tires

Please refer to the following diagram

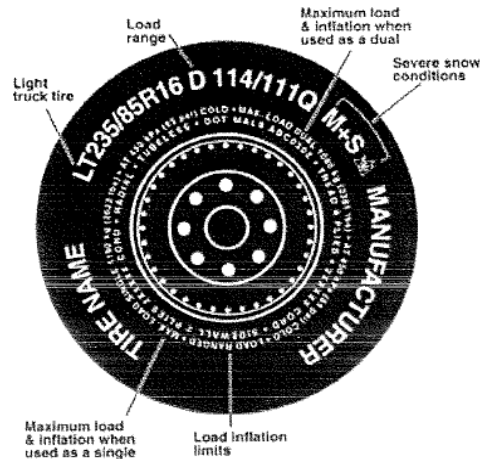

Tire for light trucks have other markings besides those found on the sidewalls of passenger tires.

#### **LT**

The “LT” indicates the tire is for light truck or trailers.

#### **ST**

An “ST” is an indication the tire is for trailer use only

#### **Max. Load Dual KG (lbs.) at kPa (psi) Cold**

This information indicates the maximum load and tire pressure when the tire is used as a dual, that is, when four tires are put on each rear axle (a total of six or more tires on the vehicle)

#### **Max. Load Single KG (lbs.) at kPa (psi) Cold**

This information indicates the maximum load and tire pressure when the tire is used as a single

#### **Load Range**

This information identifies the tire’s load-carrying capabilities and it inflation limits

### 1.6. Tire Safety Tips

#### **Preventing Tire Damage**

- Slow down if you have to go over a pothole or other objects in the road
- Do not run over curbs or other foreign objects in the roadway, and try not to strike the curb when parking.

#### **Tire Safety Checklist**

- Check tire pressure regularly (at least once a month), including the spare
- Inspect tires for uneven wear patterns on the tread, cracks, foreign objects, or other signs of wear or trauma
- Remove bits of glass and foreign objects wedges in the tread
- Make sure your tire valves have valve caps
- Check tire pressure before going on a long trip
- Do no overload your vehicle. Check the tire information and loading placard or user’s manual of the maximum recommended load for the vehicle